

HT-X720
HT-X720G

Digital Home Cinema System user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register

SAMSUNG

Features

Playback of many different disc types

This Home Cinema System allows you to play back various discs, including DVD-VIDEO, CD, MP3-CD, WMA-CD, DivX, CD-R/RW, and DVD±R/RW.

USB Host support

You can connect and play files from external USB storage devices such as MP3 players, USB flash memory, etc. using the Home Cinema's USB HOST function.

TV Screen Saver Function

If the unit remains in Stop mode for 3 minutes, the Samsung logo appears on the TV screen.

The HT-X720/HT-X720G automatically switches itself into the power saving mode after 20 minutes in the Screen Saver mode.

Power Saving Function

The HT-X720/HT-X720G automatically shuts itself off after 20 minutes in Stop mode.

Customized TV Screen Display

The HT-X720/HT-X720G allows you to select your favourite image during JPEG, DVD playback and set it as your background wallpaper.

HDMI

HDMI transmits DVD video and audio signals simultaneously, and provides a clearer picture.

AV SYNC Function

Video may lag behind the audio if the unit is connected to a digital TV.

To compensate for this, you can adjust the audio delay time to sync up with the video.

Anynet+(HDMI-CEC) Function

Anynet+ is a function that can be used to operate the main unit using a Samsung TV remote control, by connecting the Home Cinema to a SAMSUNG TV using an HDMI Cable. (This is only available with SAMSUNG TV's that support Anynet+.)



iPod & iPhone support

You can enjoy music files by connecting your iPod to the DVD Home Cinema with the supplied iPod dock.

BD Wise

BD Wise automatically adjusts BD Wise-compliant Samsung products to the optimal settings between them. This feature is enabled only if BD Wise-compliant Samsung TV's are connected with each other using the HDMI cable.

WHAT'S INCLUDED

Check for the supplied accessories below.



Video Cable



FM Antenna



User's Manual



Remote Control
/ Batteries (AAA size)

Safety information

SAFETY WARNINGS


TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

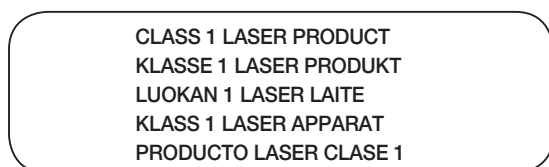

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CAUTION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The Mains plug is used as a disconnect device and shall stay readily operable at any time.

Wiring the Main Power Supply Plug (UK Only)

IMPORTANT NOTICE

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and if it requires replacing, a fuse approved to BS1362 of the same rating must be used.

Never use the plug with the fuse cover removed. If the cover is detachable and a replacement is required, it must be of the same colour as the fuse fitted in the plug. Replacement covers are available from your dealer.

If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance.

However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a mains socket as there is a risk of shock hazard from the bared flexible cord.

Never attempt to insert bare wires directly into a mains socket. A plug and fuse must be used at all times.


IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:– BLUE = NEUTRAL BROWN = LIVE

As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows:–



The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK.

The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.


WARNING : DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E OR BY THE EARTH SYMBOL , OR COLOURED GREEN OR GREEN AND YELLOW.

Safety information


PRECAUTIONS

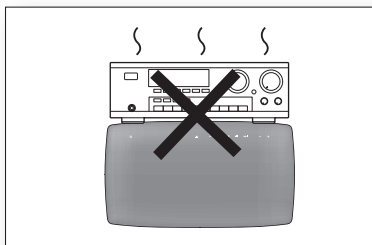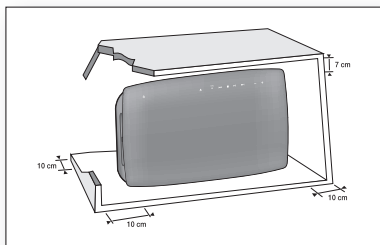


Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (7.5~10 cm). Make sure the ventilation slots are not covered. Do not stack anything on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player, ensure the disc tray is empty. This player is designed for continuous use. Switching off the Home Cinema System to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the mains plug from the wall outlet, especially when left unused for a long period of time.

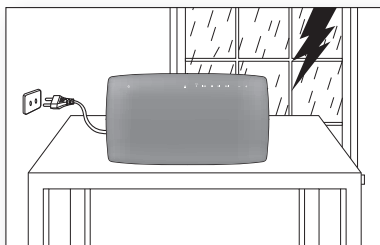

During thunderstorms, disconnect the AC mains plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

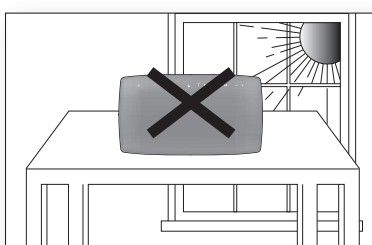


Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and malfunction of the unit.

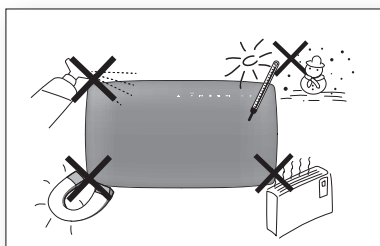

Protect the player from moisture (i.e. vases), and excess heat (e.g. fireplace) or equipment creating strong magnetic or electric fields (i.e. speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use. Use of this product is for personal use only.

Condensation may occur if your player or disc has been stored in cold temperatures. If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

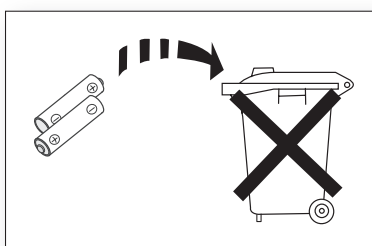

The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash.

Contents

FEATURES	2	What's included
2		
SAFETY INFORMATION	3	Safety Warnings
	4	Precautions
3		
GETTING STARTED	7	Before Reading the User's Manual
	8	Playable Discs
	8	Do not use the following types of discs!
	8	Copy Protection
	9	Disc Type and Characteristics
7		
DESCRIPTION	10	Front Panel
	11	Rear Panel
10		
REMOTE CONTROL	12	Tour of the Remote Control
	14	Setting the Remote Control
12		
CONNECTIONS	16	Connecting the Speakers
	18	Connecting the Video Out to your TV
	19	BD Wise (only Samsung products)
	20	HDMI Function
	21	Connecting an iPod
	23	Connecting Audio from External Components
	25	Connecting the FM Antenna
16		
BEFORE USING YOUR HOME CINEMA	26	Before Using Your Home Cinema
26		
PLAYBACK	27	Disc Playback
	28	MP3/WMA-CD Playback
	29	JPEG File Playback
	30	DivX Playback
	32	Using the Playback Function
	39	Using the iPod
	41	Playing Media Files using the USB Host Feature
27		

Contents

SYSTEM SETUP

43

- 43 Setting the Language
- 43 Setting the HDMI Video Out Mode
- 44 Setting TV Screen Type
- 45 Setting Parental Controls (Rating Level)
- 45 Setting the Password
- 46 Setting the Wallpaper
- 46 To Select One of the 3 Wallpaper Settings You've Made
- 47 Setting the DRC (Dynamic Range Compression)
- 47 Setting the AV SYNC
- 48 Setting the HDMI Audio
- 48 Setting the Audio

RADIO

49

- 49 Listening to Radio
- 49 Presetting Stations

CONVENIENT FUNCTION

50

- 50 Mute Function
- 50 Sleep Timer Function
- 50 Adjusting Display Brightness
- 51 V-SOUND (Virtual Sound)
- 51 Virtual Headphone Function
- 52 S.VOL (Smart Volume)
- 52 P.BASS/AUDIO Upscaling
- 53 Basic Use CD RIPPING

TROUBLESHOOTING

54

- 54 Troubleshooting

LANGUAGE CODE LIST

56

- 56 Language Code List

APPENDIX

57








- 57 Cautions on Handling and Storing Discs
- 58 Specifications

Getting started


BEFORE READING THE USER'S MANUAL

Make sure to check the following terms before reading the user manual.

Icons that will be used in manual

Icon	Term	Definition
	DVD	This involves a function available with DVD or DVD-R/DVD-RW discs that have been recorded and finalized in Video Mode.
	CD	This involves a function available with a data CD (CD-R or CD-RW).
	MP3	This involves a function available with CD-R/-RW discs, including USB.
	JPEG	This involves a function available with CD-R/-RW discs, including USB.
	DivX	This involves a function available with MPEG4 discs. (DVD±R/RW, CD-R or CD-RW)
	Caution	This involves a case where a function does not operate or settings may be cancelled.
	Note	This involves tips or instructions on the page that help each function operate.



- In this manual, the instructions marked with "DVD ()" are applicable to DVD-VIDEO and DVD-R/-RW discs that have been recorded in Video Mode and then finalized. Where a particular DVD type is mentioned, it is indicated separately.
- If a DVD-R/-RW disc has not been recorded properly in DVD Video format, it will not be playable.

About the use of this user's manual

- 1) Be sure to be familiar with Safety Information before using this product. (See pages 3~4)
- 2) If a problem occurs, check the Troubleshooting. (See pages 54~55)

Copyright

©2009 Samsung Electronics Co.,Ltd.

All rights reserved; No part or whole of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd.

Getting started



DVD (Digital Versatile Disc) offers fantastic audio and video, thanks to Dolby Digital surround sound and MPEG-2 video compression technology. Now you can enjoy these realistic effects in the home, as if you were in a movie cinema or concert hall.



Home Cinema Systems and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

The Region Number for this player is given on the rear panel of the player.

(Your Home Cinema System will only play DVDs that are labelled with identical region codes.)

PLAYABLE DISCS

Disc Type	Mark (Logo)	Recorded Signals	Disc Size	Max. Playing Time
DVD-VIDEO		VIDEO	12 cm	Approx. 240 min. (single-sided)
				Approx. 480 min. (double-sided)
			8 cm	Approx. 80 min. (single-sided)
				Approx. 160 min. (double-sided)
AUDIO-CD		AUDIO	12 cm	74 min.
			8 cm	20 min.
DivX		AUDIO + VIDEO	12 cm	—
			8 cm	—

DO NOT USE THE FOLOWING TYPES OF DISCS !

- LD, CD-G, CD-I, CD-ROM, DVD-RAM and DVD-ROM discs cannot be played on this player.
If such discs are played, a <WRONG DISC FORMAT> message appears on the TV screen.
- DVD discs purchased abroad may not play on this player.
If such discs are played, a <CAN'T PLAY THIS DISC PLEASE, CHECK REGION CODE> message appears on the TV screen.

COPY PROTECTION

- Many DVD discs are encoded with copy protection. Because of this, you should only connect your Home Cinema System directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

DISC TYPE AND CHARACTERISTICS

This product does not support Secure (DRM) Media files.

❖ CD-R Discs

- Some CD-R discs may not be playable depending on the disc recording device (CD-Recorder or PC) and the condition of the disc.
- Use a 650MB/74 minute CD-R disc.
Do not use CD-R discs over 700MB/80 minute as they may not be played back.
- Some CD-RW (Rewritable) media, may not be playable.
- Only CD-Rs that are properly "closed" can be fully played. If the session is closed but the disc is left open, you may not be able to fully play the disc.

❖ CD-R MP3 Discs

- Only CD-R discs with MP3 files in ISO 9660 or Joliet format can be played.
- MP3 file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Use discs recorded with a compression/decompression data rate greater than 128Kbps.
- Only files with the ".mp3" and ".MP3" extensions can be played.
- Only a consecutively written multisession disc can be played. If there is a blank segment in the Multisession disc, the disc can be played only up to the blank segment.
- If the disc is not closed, it will take longer to begin playback and not all of the recorded files may be played.
- For files encoded in Variable Bit Rate (VBR) format, i.e. files encoded in both low bit rate and high bit rate (e.g., 32Kbps ~ 320Kbps), the sound may skip during playback.
- A maximum of 500 tracks can be played per CD.
- A maximum of 300 folders can be played per CD.

❖ CD-R JPEG Discs

- Only files with the ".jpg" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- JPEG file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- A maximum of 9,999 images can be stored on a single CD.
- When playing a Kodak/Fuji Picture CD, only the JPEG files in the picture folder can be played.
- Picture discs other than Kodak/Fuji Picture CDs may take longer to start playing or may not play at all.


❖ DVD±R/RW, CD-R/RW DivX Discs

- Software updates for incompatible formats are not supported.
(Example : QPEL, GMC, resolution higher than 800 x 600 pixels, etc.)
- Sections with a high frame rate might not be played while playing a DivX file.

DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified or DivX Ultra Certified device that plays DivX video.


Description

FRONT PANEL

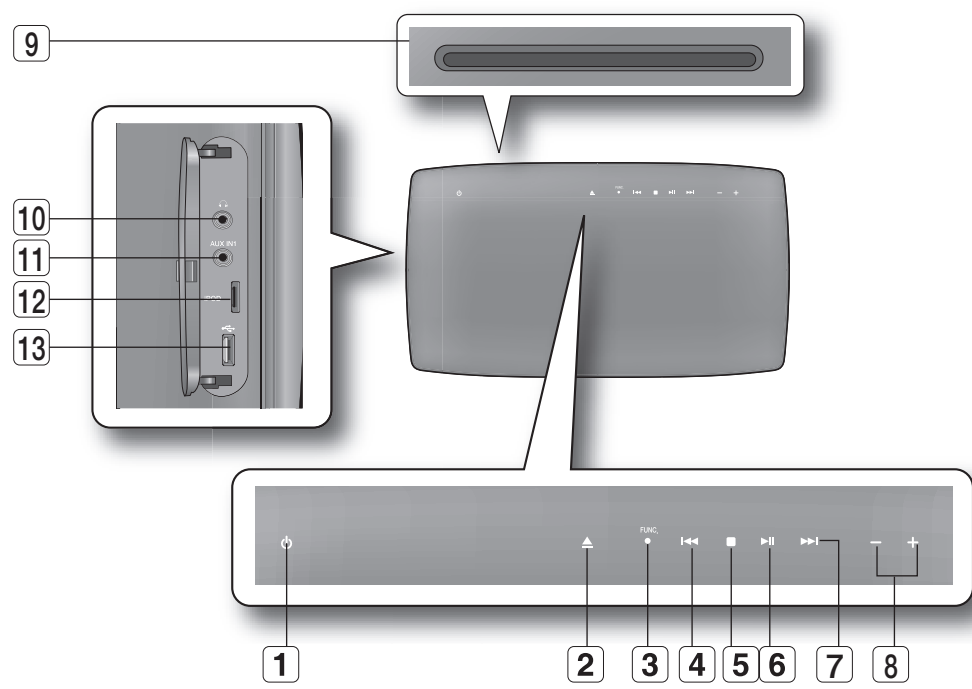

1	POWER BUTTON	6	PLAY/PAUSE (▶) BUTTON	11	AUX IN 1
2	EJECT BUTTON	7	TUNING UP & SKIP (▶▶) BUTTON	12	iPOD JACK
3	FUNCTION BUTTON	8	VOLUME CONTROL	13	USB PORT
4	TUNING DOWN & SKIP (◀◀) BUTTON	9	DISC TRAY		
5	STOP (■) BUTTON	10	HEADPHONE JACK		


REAR PANEL

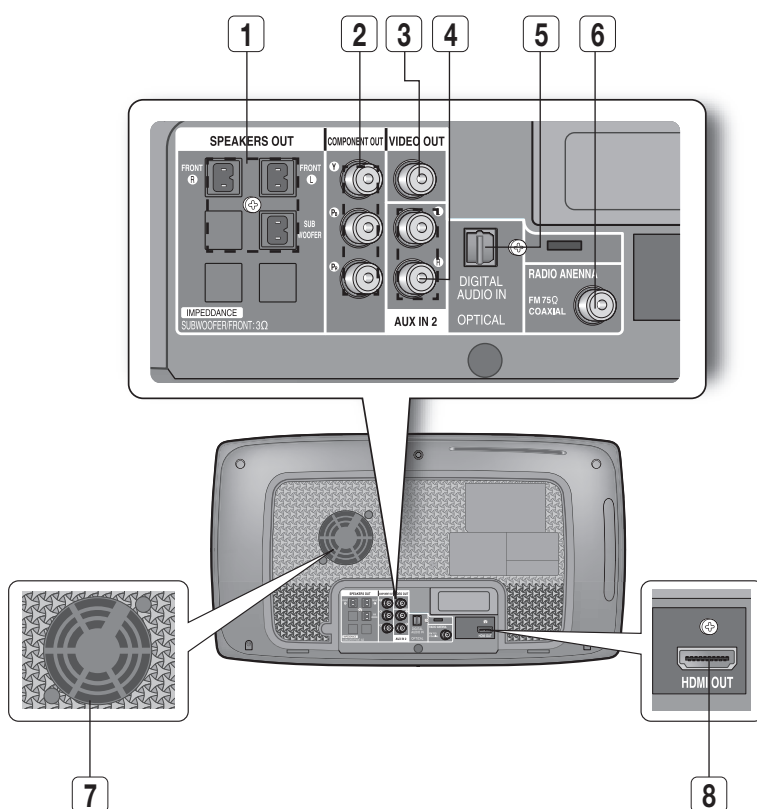



1	SPEAKER OUTPUT CONNECTORS	Connect the left, right and subwoofer speakers.
2	COMPONENT VIDEO OUTPUT JACKS	Connect a TV with Component video inputs to these jacks.
3	VIDEO OUTPUT JACK	Connect the TV's Video Input jack (VIDEO IN) to the VIDEO OUT jack.
4	AUX IN 2 JACKS	Connect to the 2CH analogue output of an external device (such as a VCR)
5	EXTERNAL DIGITAL OPTICAL INPUT JACK	Use this to connect external equipment capable of digital output.
6	FM 75Ω COAXIAL JACK	Connect the FM antenna.
7	COOLING FAN	The fan always revolves when the power is on. Ensure a minimum of 10 cm of clear space on all sides of the fan when installing the product.
8	HDMI OUT JACK	Use the HDMI cable, connect this HDMI output terminal to the HDMI input terminal on your TV for the best quality picture.



Remote control

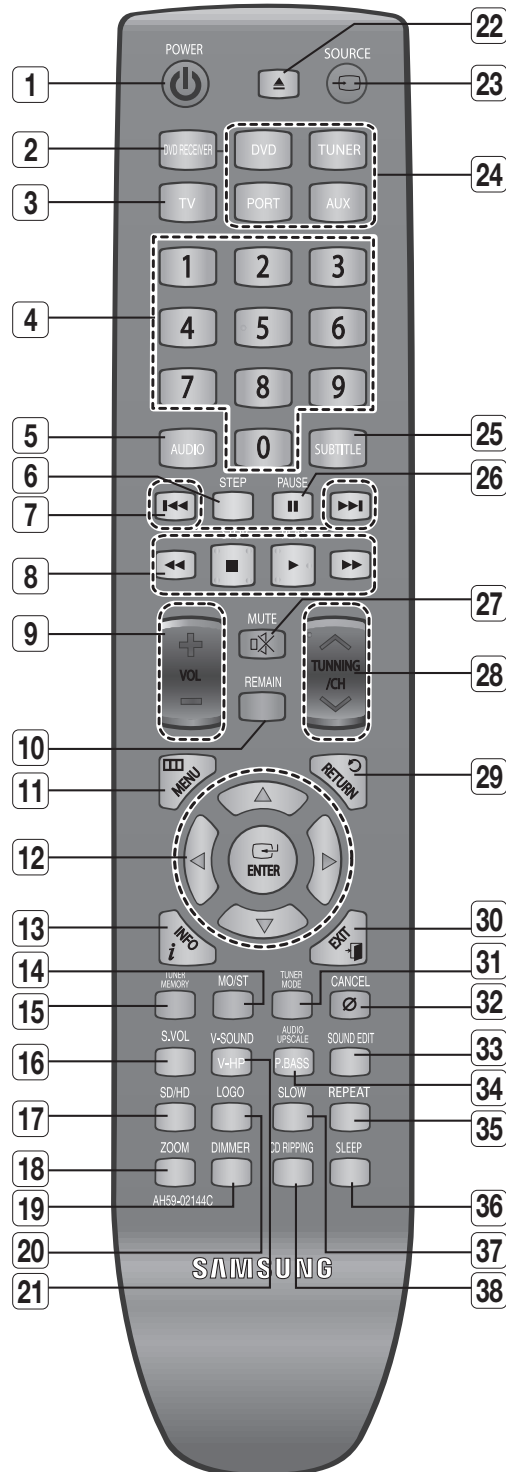TOUR OF THE REMOTE CONTROL



1	POWER button	21	V-SOUND(Virtual Sound), V-H/P(Virtual Headphone) button
2	DVD RECEIVER button	22	EJECT button
3	TV button	23	SOURCE button
4	NUMBER (0~9) buttons	24	 DVD button  TUNER button  PORT button  AUX button
5	AUDIO button	25	SUBTITLE button
6	STEP button	26	PAUSE button
7	CD SKIP button	27	MUTE button
8	 PLAY button  STOP button  SEARCH buttons	28	TUNNING/CH button
9	VOLUME button	29	RETURN button
10	REMAIN button	30	EXIT button
11	MENU button	31	TUNER MODE button
12	CURSOR/ENTER button	32	CANCEL button
13	INFO button	33	SOUND EDIT button
14	MO/ST button	34	AUDIO UPSCALE/P.BASS button
15	TUNER MEMORY button	35	REPEAT button
16	S.VOL button	36	SLEEP button
17	SD/HD button	37	SLOW button
18	ZOOM button	38	CD RIPPING button
19	DIMMER button		
20	LOGO button		

Installing batteries in the Remote Control

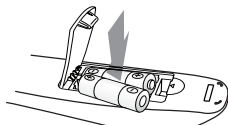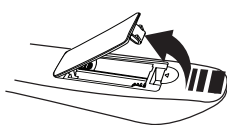

1. Lift the cover at the back of the remote control upward as shown.

2. Install two AAA size batteries.
Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.

3. Replace the cover.
Assuming typical TV usage, the batteries last for about one year.



Follow these precautions to avoid leaking or cracking cells:

- Place batteries in the remote control so they match the polarity : (+) to (+) and (-) to (-).
- Use the correct type of batteries. Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose the batteries to heat or a flame.

Remote control

SETTING THE REMOTE CONTROL

You can control certain functions of your TV with this remote control.


When operating a TV with the remote control

1. Press the **TV** button to set the remote to TV mode.
2. Press the **POWER** button to turn on the TV.
3. While holding down the **POWER** button, enter the code corresponding to your brand of TV.
 - If there is more than one code listed for your TV in the table, enter one at a time to determine which code works.

Example : For a Samsung TV

While holding down the **POWER** button, use the **number** buttons to enter 00, 15, 16, 17 and 40.


4. If the TV turns off, the setting is complete.
 - You can use the TV POWER, VOLUME, CHANNEL, and Numeric buttons (0~9).

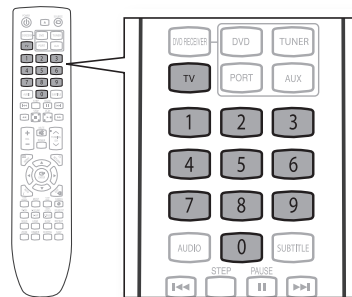

- The remote control may not work on some brands of TV's. Also, some operations may not be possible depending on your brand of TV.
- If you do not set the remote control with the code for your brand of TV, the remote control will work on a Samsung TV by default.

Operation Range of the Remote Control

The remote control can be used up to approximately 7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

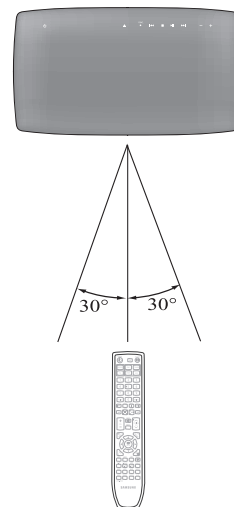


TV Brand Code List

No.	Brand	Code	No.	Brand	Code
1	Admiral (M.Wards)	56, 57, 58	44	MTC	18
2	A Mark	01, 15	45	NEC	18, 19, 20, 40, 59, 60
3	Anam	01, 02, 03, 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14	46	Nikei	03
4	AOC	01, 18, 40, 48	47	Onking	03
5	Bell & Howell (M.Wards)	57, 58, 81	48	Onwa	03
6	Brocsonic	59, 60	49	Panasonic	06, 07, 08, 09, 54, 66, 67, 73, 74
7	Candle	18	50	Penney	18
8	Cetronic	03	51	Philco	03, 15, 17, 18, 48, 54, 59, 62, 69, 90
9	Citizen	03, 18, 25	52	Philips	15, 17, 18, 40, 48, 54, 62, 72
10	Cinema	97	53	Pioneer	63, 66, 80, 91
11	Classic	03	54	Portland	15, 18, 59
12	Concerto	18	55	Proton	40
13	Contec	46	56	Quasar	06, 66, 67
14	Coronado	15	57	Radio Shack	17, 48, 56, 60, 61, 75
15	Craig	03, 05, 61, 82, 83, 84	58	RCA/Proscan	18, 59, 67, 76, 77, 78, 92, 93, 94
16	Croslex	62	59	Realistic	03, 19
17	Crown	03	60	Sampo	40
18	Curtis Mates	59, 61, 63	61	Samsung	00, 15, 16, 17, 40, 43, 46, 47, 48, 49, 59, 60, 98
19	CXC	03	62	Sanyo	19, 61, 65
20	Daewoo	02, 03, 04, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 32, 34, 35, 36, 48, 59, 90	63	Scott	03, 40, 60, 61
21	Daytron	40	64	Sears	15, 18, 19
22	Dynasty	03	65	Sharp	15, 57, 64
23	Emerson	03, 15, 40, 46, 59, 61, 64, 82, 83, 84, 85	66	Signature 2000 (M.Wards)	57, 58
24	Fisher	19, 65	67	Sony	50, 51, 52, 53, 55
25	Funai	03	68	Soundesign	03, 40
26	Futuretech	03	69	Spectricon	01
27	General Electric (GE)	06, 40, 56, 59, 66, 67, 68	70	SSS	18
28	Hall Mark	40	71	Sylvania	18, 40, 48, 54, 59, 60, 62
29	Hitachi	15, 18, 50, 59, 69	72	Symphonic	61, 95, 96
30	Inkel	45	73	Tatung	06
31	JC Penny	56, 59, 67, 86	74	Techwood	18
32	JVC	70	75	Teknika	03, 15, 18, 25
33	KTV	59, 61, 87, 88	76	TMK	18, 40
34	KEC	03, 15, 40	77	Toshiba	19, 57, 63, 71
35	KMC	15	78	Vidtech	18
36	LG (Goldstar)	01, 15, 16, 17, 37, 38, 39, 40, 41, 42, 43, 44	79	Videch	59, 60, 69
37	Luxman	18	80	Wards	15, 17, 18, 40, 48, 54, 60, 64
38	LXI (Sears)	19, 54, 56, 59, 60, 62, 63, 65, 71	81	Yamaha	18
39	Magnavox	15, 17, 18, 48, 54, 59, 60, 62, 72, 89	82	York	40
40	Marantz	40, 54	83	Yupiteru	03
41	Matsui	54	84	Zenith	58, 79
42	MGA	18, 40	85	Zonda	01
43	Mitsubishi/MGA	18, 40, 59, 60, 75	86	Dongyang	03, 54

Connections

This section involves various methods of connecting the Digital Home Cinema to other external components. Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

CONNECTING THE SPEAKERS

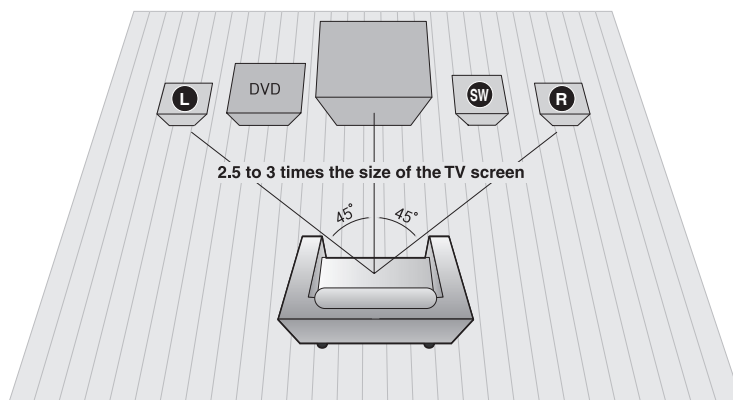

Position of Digital Home Cinema

Place it on a stand or cabinet shelf, or under the TV stand.

Selecting the Listening Position

The listening position should be located about 2.5 to 3 times the distance of the TV's screen size away from the TV.

Example : For 32" TV's 2~2.4m

For 55" TV's 3.5~4m

Front Speakers **L** **R**

Place these speakers in front of your listening position, facing inwards (about 45°) toward you.

Place the speakers so that their tweeters will be at the same height as your ear.



Align the front face of the front speakers with the front face of the centre speaker or place them slightly in front of the centre speakers.

Subwoofer **SW**

The position of the subwoofer is not so critical. Place it anywhere you like.

Connecting The Speakers

1. Press down the terminal tab on the back of the speaker.
2. Insert the black wire into the black terminal (-) and the red wire into the red (+) terminal, and then release the tab.
3. Connect the connecting plugs to the back of the Home Cinema.
 - Make sure the colours of the speaker terminals match the colours of the connecting plugs.

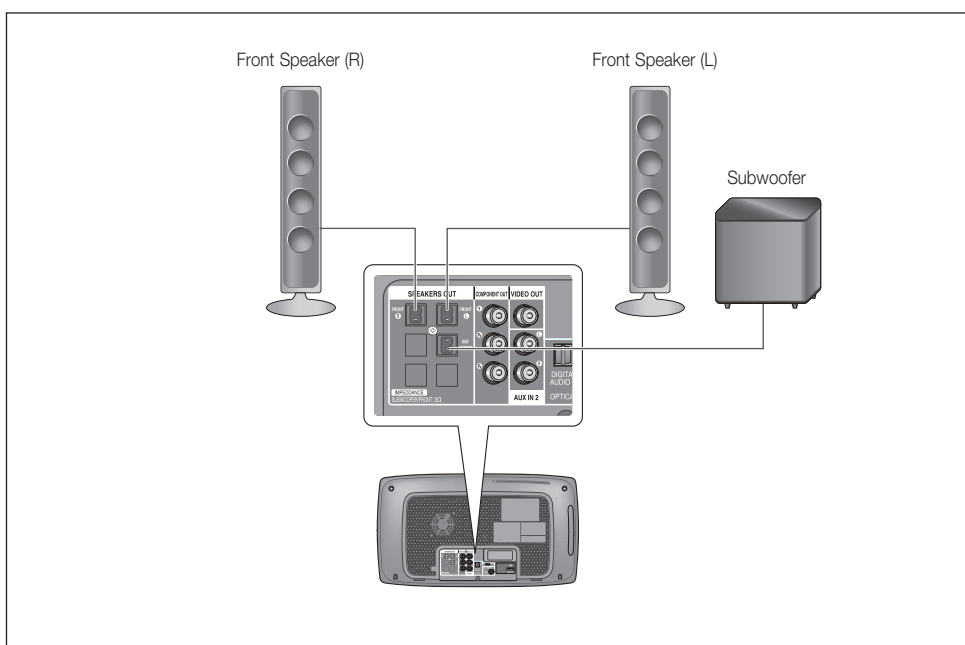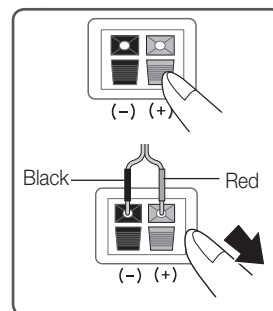

- Do not let children play with or near the speakers. They could get hurt if a speaker falls.
- When connecting the speaker wires to the speakers, make sure that the polarity (+/-) is correct.
- Keep the subwoofer speaker out of reach of children so as to prevent children from inserting their hands or other objects into the duct (slot) of the subwoofer speaker.
- Do not hang the subwoofer on the wall through the duct (slot).




- If you place a speaker near your TV set, screen colour may be distorted because of the magnetic field generated by the speaker. If this occurs, place the speaker away from your TV set.

Connections

CONNECTING THE VIDEO OUT TO YOUR TV

Choose one of the three methods for connecting to a TV.

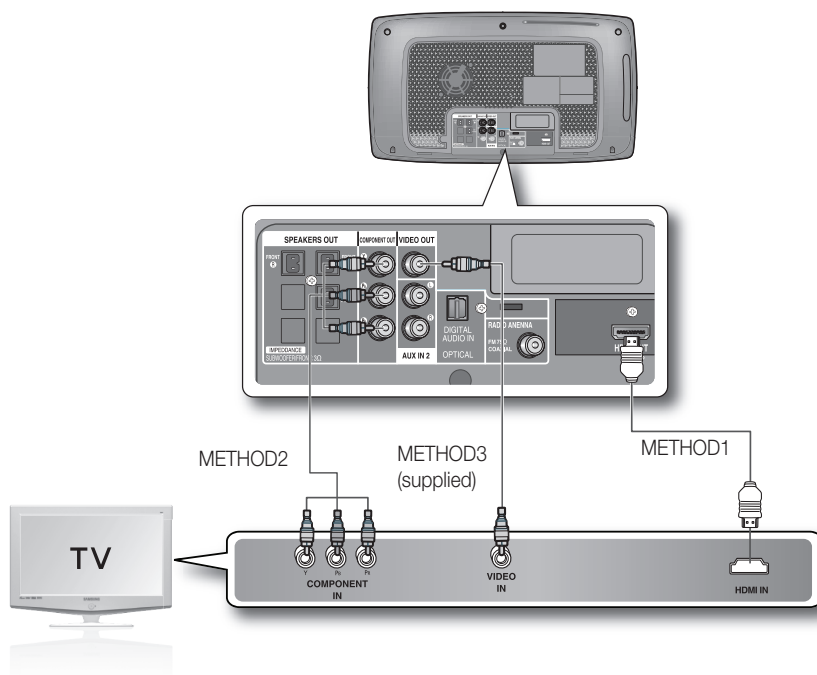

METHOD 1 : HDMI

Connect the HDMI cable (not supplied) from the HDMI OUT jack on the back of the Home Cinema System to the HDMI IN jack on your TV.

METHOD 2 : Component Video

If your television has Component Video inputs, connect a Component video cable (not supplied) from the Component Video Output (Pr, Pb and Y) jacks on the back of the Home Cinema System to the Component Video Input jacks on your TV.

METHOD 3 : Composite Video

Connect the supplied Video cable from the VIDEO OUT jack on the back of the Home Cinema System to the VIDEO IN jack on your TV.



- The resolution from the Component Output is 576i(480i).
- If you use an HDMI cable to connect a Samsung TV to the Home Cinema System, you can operate the Home Cinema using the TV's remote control. This is only available with SAMSUNG TV's that support Anynet+(HDMI-CEC).
- Please check the **AnyNet+** logo (If your TV has an **AnyNet+** logo, then it supports the Anynet+ function.)

HDMI Auto Detection Function

The player's video output will automatically change to HDMI mode when connecting an HDMI cable while power is on.

- **HDMI (High Definition Multimedia Interface)**

HDMI is an interface that enables the digital transmission of video and audio data with just a single connector. Using HDMI, the DVD Home Cinema transmits a digital video and audio signals and displays a vivid picture.

- **HDMI connection description**

HDMI connector - Supports video and digital audio data.

- HDMI outputs only a pure digital signal to the TV.
- If your TV does not support HDCP (High-bandwidth Digital Content Protection), random noise appears on the screen.

- **Why does Samsung use HDMI?**

Analogue TV's require an analogue video/audio signal. However, when playing a DVD, the data transmitted to a TV is digital. Therefore either a digital-to-analogue converter (in the DVD Home Cinema) or an analogue-to-digital converter (in the TV) is required. During this conversion, the picture quality is degraded due to noise and signal loss. HDMI technology is superior because it requires no D/A conversion and is a pure digital signal from the player to your TV.

- **What is the HDCP?**

HDCP (High-band width Digital Content Protection) is a system for protecting DVD content outputted via HDMI from being copied. It provides a secure digital link between a video source (PC, DVD, etc) and a display device (TV, projector, etc). Content is encrypted at the source device to prevent unauthorized copies from being made.

- **What is Anynet+?**

Anynet+ is a convenient function that offers linked operation of this unit through Samsung TV's with the Anynet+ feature.

- If your Samsung TV has an *Anynet+* logo, then it supports the Anynet+ function.
- If you turn on the player and insert a disc, the player will start playing the disc, and the TV will turn on automatically and switch to HDMI mode.
- If you turn on the player and press the Play button with a disc already inserted, the TV will immediately turn on and switch to HDMI mode.

BD WISE (Samsung products only)

You can select to use the BD Wise menu only if the Samsung home cinema is connected to a Samsung TV that supports BD Wise using an HDMI cable.


- **What is BD Wise?**

BD Wise automatically adjusts BD Wise-compliant Samsung products to the optimal settings between them.

This feature is enabled only if BD Wise-compliant Samsung products are connected to each other using an HDMI cable.

- **To use BD Wise**

1. Use an HDMI cable to connect the Samsung home cinema to a BD Wise-compliant Samsung TV.
2. Set each BD Wise menu of the Samsung home cinema and the Samsung TV to On, respectively.
 - This will optimize the picture quality according to the content (In the disc, DVD, etc) that you want to play.
 - This will also optimize the picture quality between the home cinema and your BD Wise-compliant Samsung TV.

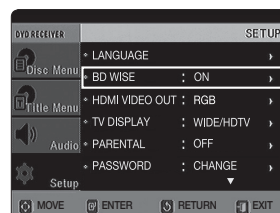

- If you want to change the resolution in BD Wise mode, you must set BD mode to Off in advance.
- If you set the BD Wise mode to off, the resolution of the connected TV will be adjusted to its maximum resolution automatically.
- BD Wise will be disabled if the player is connected to a device that does not support BD Wise.

Connections


HDMI FUNCTION

Resolution Selection

This function allows the user to select the screen resolution for HDMI output.

In Stop mode, press the **SD/HD** (Standard Definition/High Definition) button on the remote control.

- Resolutions available for the HDMI output are 576p(480p), 720p, 1080i/1080p.
- SD(Standard Definition) resolution is 576p(480p) and HD (High Definition) resolution is 720p, 1080i/1080p. The default value of HDMI output is 576p(480p).

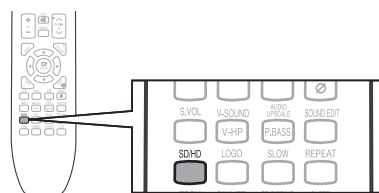

- If the TV does not support the configured resolution, you will not be able to see the picture.
- When an HDMI cable is connected, composite and component video signals are not output.
- See your TV owner's manual for more information on how to select the TV's Video Input source.

Why use HDMI (High Definition Multimedia Interface)?

This device transmits a DVD video signal digitally without the process of converting to analogue. You will get sharper digital pictures when using an HDMI connection.

Using Anynet+(HDMI-CEC)

Anynet+ is a function that enables you to control other Samsung Devices with your Samsung TV's remote control. Anynet + can be used by connecting this Home Cinema to a SAMSUNG TV using an HDMI Cable. This is only available with SAMSUNG TV's that support Anynet+.

1. Connect the main unit of the Home Cinema to a Samsung TV with an HDMI cable. (See page 18)
2. Set the Anynet+ function on your TV.
(See the TV instructions manual for more information.)
 - You can operate the Home Cinema by using the TV remote control. (Available TV buttons : ◀◀, ■, ▶▶, ▲, ▼ and ◀, ▶ buttons, 0~9 button)

If you select the TV

Set the Anynet+(HDMI-CEC) to **On** by pressing the Anynet+ button on your TV.

- **Receiver : On** : You can listen to audio through the Home Cinema.
- **Receiver : Off** : You can listen to audio through the TV.

If you select the Theatre

Select **Theatre to connector** and set the option of each items below.

- **View TV** : If Anynet+(HDMI-CEC) is set to on and you select View TV, the Home Cinema will automatically switch to DIGITAL IN mode.
- **Theatre Menu** : You can access and control the Home Cinema menu.
- **Theatre Operation** : The Home Cinema disc playback information will be displayed. You can control the Disc operation of the Home Cinema such as title, chapter and subtitle change.
- **Receiver : On** : You can listen to audio through the Home Cinema.
- **Receiver : Off** : You can listen to audio through the TV.

With Anynet+


You can operate this unit, power on your TV, or watch a movie by pressing the Play button on your Samsung TV's remote control.



- The Cinema function is available only when you listen to the audio through the Home Cinema with the digital optical cable connected.

CONNECTING AN iPod


You can listen to audio from an iPod through the main unit. For iPod operation with this DVD Home Cinema, see this page and page 39.

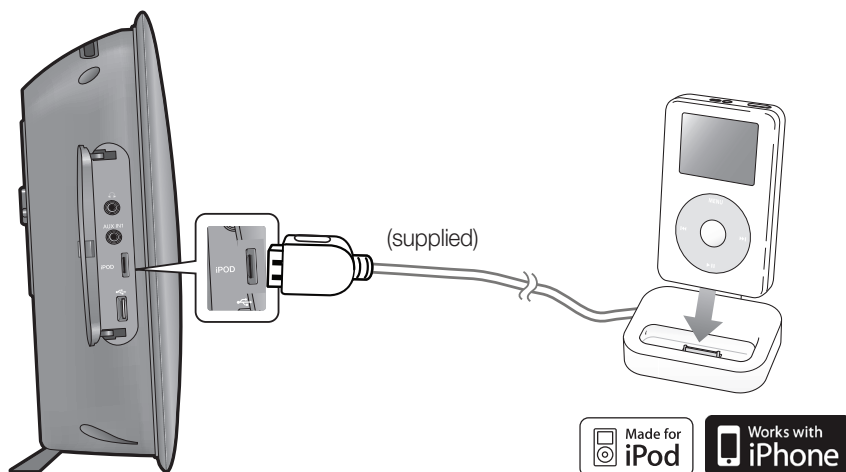

1. Connect the iPod dock connector to the iPod jack on the DVD Home Cinema.
2. Press the **PORT** button on the remote control to select **OSD iPod** to listen to music, and **V/P iPod** to view videos.
 - You can also use the **FUNCTION** button on the main unit.
The mode switches as follows :
DVD/CD → DIGITAL → AUX1 → AUX2 → USB → OSD IPOD → V/P IPOD → TUNER.

 

 
 




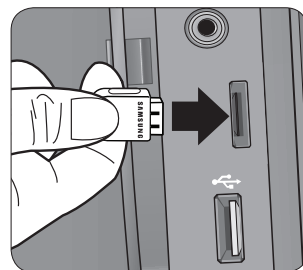


 





- As the cable ports are close together, be sure to remove TX card before disconnecting the iPod docking cable.
- OSD iPod is for audio iPod, V/P iPod is for video iPod.
- Depending on the type of iPod, you may need to insert one of the dock slots which are provided by Apple when you purchase the iPod. (see next page).
- Adjust the volume to a moderate level before you connect your iPod and DVD Home Cinema.
- When the unit is powered on and you connect an iPod, the unit will charge your iPod's battery.
- You must have the VIDEO output connected to your TV view iPod video.
- Make sure to connect the dock connector so that the label "**SAMSUNG**" faces upward.



Connections

iPod models that are available to HT-X720/HT-X720G

 iPod 1st+2nd generation 5GB 10GB 20GB	 iPod 5th generation (video) 30GB 60GB 80GB	 iPod 3rd generation 10GB 15GB 20GB 30GB 40GB
 iPod nano 2nd generation(aluminum) 2GB 4GB 8GB	 iPod mini 4GB 6GB	 iPod 4th generation 20GB 40GB
 iPod nano 3rd generation (video) 4GB 8GB	 iPod 4th generation (color display) 20GB 30GB 40GB 60GB	 iPod classic 80GB 120GB 160GB
 iPod touch 1st generation 4GB 16GB 32GB	 iPod nano 4th generation(video) 8GB 16GB	 iPod nano 1st generation 1GB 2GB 4GB
 iPod touch 2nd generation 8GB 16GB 32GB	 iPhone 4GB 8GB 16GB	 iPhone 3G 8GB 16GB




- “Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.
- “Works with iPhone” means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries. iPhone is a trademark of Apple Inc.

CONNECTING AUDIO FROM EXTERNAL COMPONENTS

AUX1 : Connecting an External Component/MP3 player


Components such as an MP3 Player

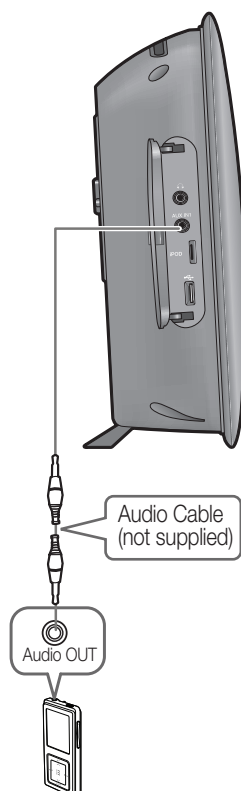

1. Connect AUX IN 1 (Audio) on the Home Cinema to the Audio Out of the external component/MP3 player.
2. Press the **AUX** button on the remote control to select **AUX1** input.
 - You can also use the **FUNCTION** button on the main unit.
The mode switches as follows :
DVD/CD → DIGITAL → AUX1 → AUX2 → USB → OSD IPOD → V/P IPOD → TUNER.

Connections

CONNECTING AUDIO FROM EXTERNAL COMPONENTS (Con.)

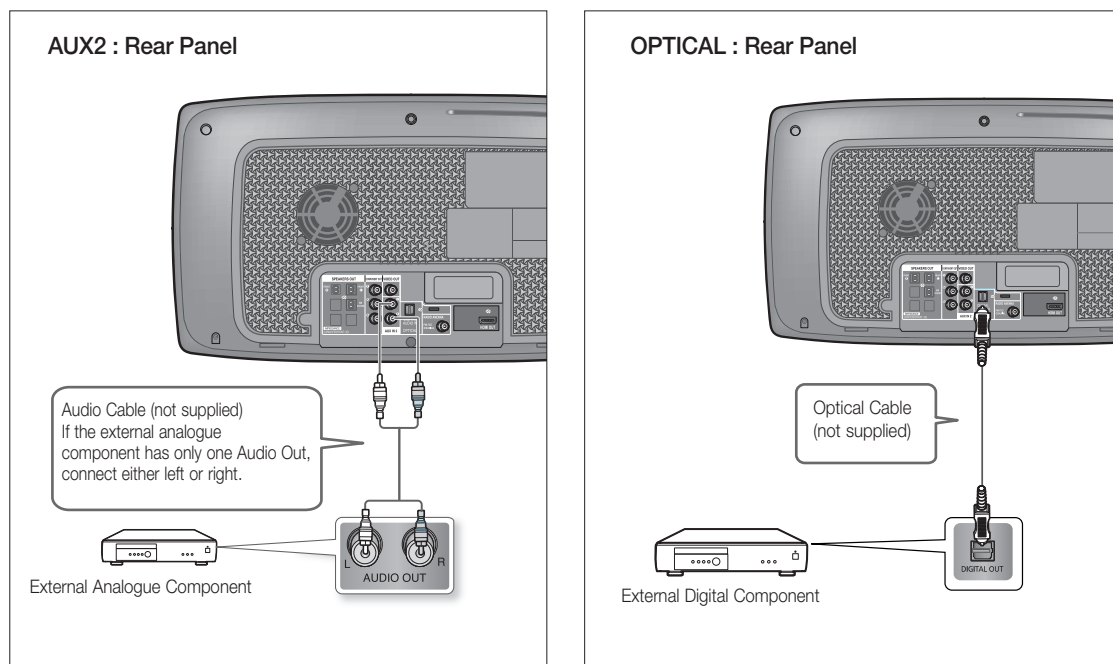

AUX2 : Connecting an External Analogue Component

Analogue signal components such as a VCR.

1. Connect AUX IN 2 (Audio) on the Home Cinema to the Audio Out of the external analogue component.
 - Be sure to match connector colours.
2. Press the **AUX** button on the remote control to select **AUX2** input.
 - You can also use the **FUNCTION** button on the main unit.
The mode switches as follows :
DVD/CD → DIGITAL → AUX1 → AUX2 → USB → OSD IPOD → V/P IPOD → TUNER.



- You can connect the Video Output jack of your VCR to the TV, and connect the Audio Output jacks of the VCR to this product.


OPTICAL : Connecting an External Digital Component

Digital signal components such as a Cable Box/Satellite receiver (Set-Top Box).

1. Connect the Digital Input (OPTICAL) on the Home Cinema to the Digital Output of the external digital component.
2. Press the **AUX** button on the remote control to select **DIGITAL**.
 - You can also use the **FUNCTION** button on the main unit.
The mode switches as follows :
DVD/CD → DIGITAL → AUX1 → AUX2 → USB → OSD IPOD → V/P IPOD → TUNER.

CONNECTING THE FM ANTENNA

1. Connect the FM antenna supplied to the FM 75Ω COAXIAL Jack.
2. Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.

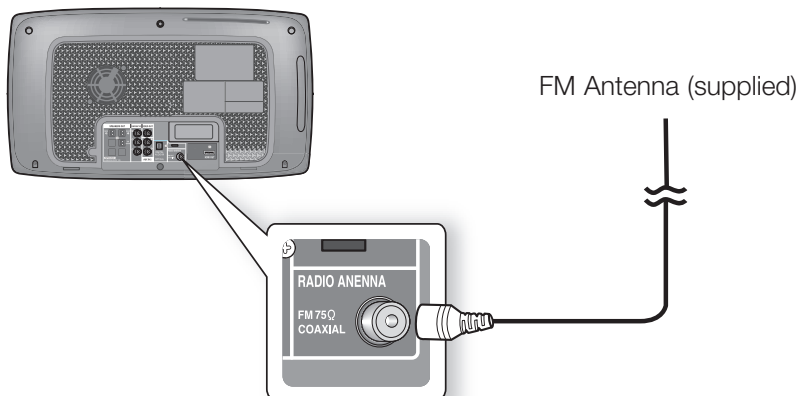

- This unit does not receive AM broadcasts.

Cooling Fan

The cooling fan supplies cool air to the unit to prevent overheating. Please observe the following cautions for your safety.

- Make sure the unit is well-ventilated. If the unit has poor ventilation, the temperature inside the unit may rise and may damage it.
- Do not obstruct the cooling fan or ventilation slots. (If the cooling fan or ventilation slots are covered with a newspaper or cloth, heat may build up inside the unit and there is a danger of fire.)





Before using your home cinema

The DVD Home Cinema's remote can be used to control Samsung TV's.

1. Plug the main unit's power cord into the AC power supply.




2. Press the **DVD RECEIVER** button to switch to DVD RECEIVER mode to operate the DVD Home Cinema.
3. Press the **FUNCTION** button on the main unit or **DVD** button on the remote to enable DVD/CD playback.
4. Press the **TV** button to set the remote to TV mode.
5. Press the **POWER** button to turn on your Samsung TV with this remote.
6. Press the **SOURCE** button to select VIDEO mode on your TV.

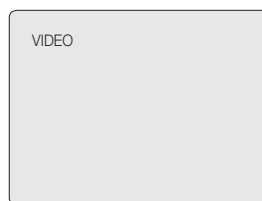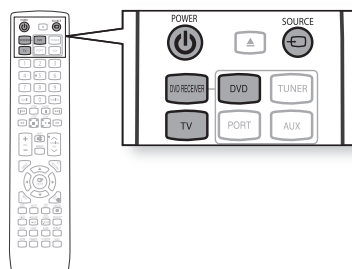

Selecting the Video Format

Press and hold the Number 7 button on the remote controller for over 5 seconds while the power is turned off.

- By default, the video format is set to "PAL".
- "NTSC" or "PAL" will appear in the display. At this time, press the Number 7 button shortly to select between "NTSC" and "PAL".
- Each country has a different video format standard.
- For normal playback, the video format of the disc must be the same as the video format of your TV.

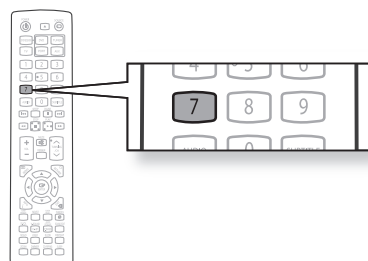


Playback

DISC PLAYBACK



1. Load a disc vertically into the Disc Insert slot.
 - Place a disc gently into the tray with the disc's label facing up.
2. Close the compartment by pressing the **PLAY** (▶) button.
 - Playback starts automatically.

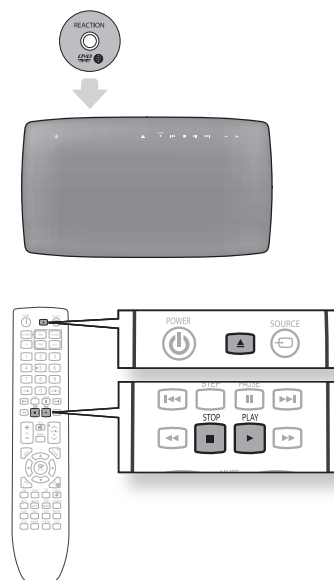

To stop playback, press the STOP (■) button during playback.

- If pressed once, **PRESS PLAY** is displayed and the stop position will be stored in memory. If the **PLAY** (▶) button or **ENTER** button is pressed, playback resumes from the stop position. (This function works only with DVDs.)
- If pressed twice, **STOP** is displayed, and if the **PLAY** (▶) button is pressed, playback starts from the beginning.

To temporarily pause playback, press the PAUSE (⏸) button during playback.

- To resume playback, press the **PLAY** (▶) button again.



- The initial screen may appear different, depending on the content of the disc.
- Pirated discs will not run in this player because it violates the CSS (Content Scrambling System : a copy protection system) recommendations.



Playback

MP3/WMA-CD PLAYBACK

Data CDs (CD-R, CD-RW) encoded in MP3/WMA format can be played.




1. Load the MP3/WMA disc.
 - The MP3/WMA menu screen will appear and playback will start.
 - The appearance of the menu depends on the MP3/WMA disc.
 - WMA-DRM files cannot be played.
2. In Stop mode, use the Cursor **▲, ▼, ◀, ▶** button to select the album, and then press the **ENTER** button.
 - Use the Cursor **▲, ▼** button to select the track.
3. To change the album, use the Cursor **▲, ▼, ◀, ▶** button to select another album in Stop mode, and then press the **ENTER** button.
4. Press the **STOP** (■) button to stop playback.

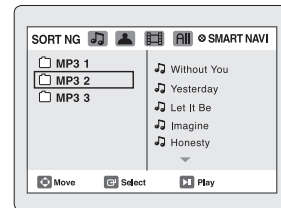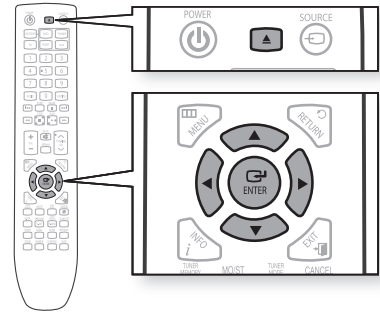

- Some MP3/WMA-CDs may not play, depending on the recording mode.
- Table of contents of a MP3-CD varies depending on the MP3/WMA track format recorded on the disc.

To play a file icon in the screen,

- Press the Cursor **▲, ▼, ◀, ▶** button when it is in Stop mode and select a desired icon from the top part of the menu.

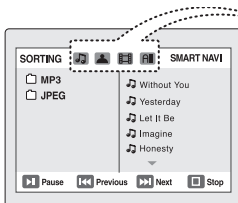

Music File Icon : To play music files only, select the icon.



Image File Icon : To view image files only, select the icon.



Movie File Icon : To view movie files only, select the icon.



All File Icon : To view all files, select the icon.


JPEG FILE PLAYBACK

Images captured with a digital camera or camcorder, or JPEG files on a PC can be stored on a CD and then can be played back with this Home Cinema.

Rotate/Flip Function



Press the Cursor ▲, ▼, ◀, ▶ button during playback.

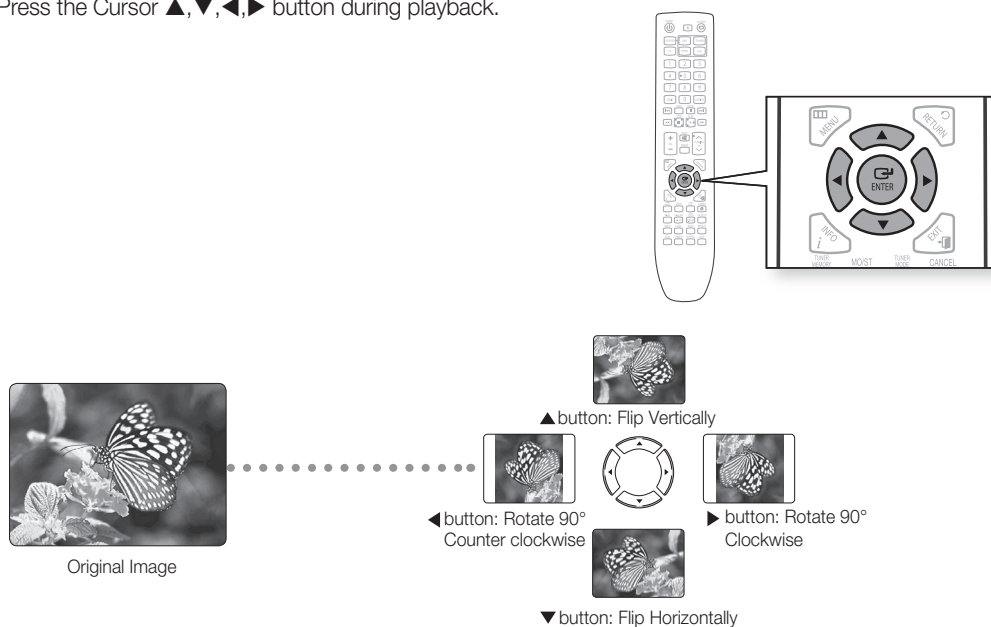

- The maximum resolutions supported by this product are 5120 x 3480 (or 19.0 MPixel) for standard JPEG files and 2048 x 1536 (or 3.0 MPixel) for progressive image files.

Playback

DIVX PLAYBACK

The functions discussed on this page apply to DivX disc playback only.



Skip Forward/Back

During playback, press the **⏮, ⏭** button.

- Goes to the next file whenever you press the **⏭** button, if there are over 2 files on the disc.
- Goes to the previous file whenever you press the **⏮** button, if there are over 2 files on the disc.


Fast Playback



During playback, press the **⏮, ⏭** button.

To play back the disc at a faster speed, press the **⏮** or **⏭** button during playback.

- Each time you press either button, the playback speed will change as follows:
2x → 4x → 8x → 32x → Play.

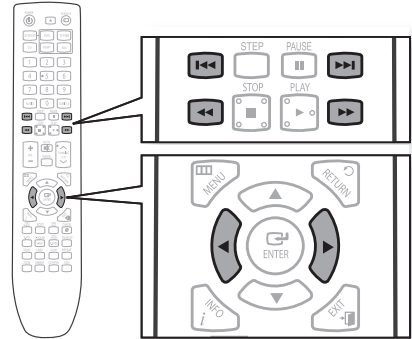

5 Minutes Skip function



During playback, press the Cursor **⏮, ⏭** button.


- Playback skips 5 minutes forward whenever you press the Cursor **⏭** button.
- Playback skips 5 minutes back whenever you press the Cursor **⏮** button.

Audio Display



Press the **AUDIO** button.

- If there are multiple audio tracks on a disc, you can toggle between them.
- Each time you press the button, your selection will toggle among **AUDIO (1/N, 2/N ...)**.

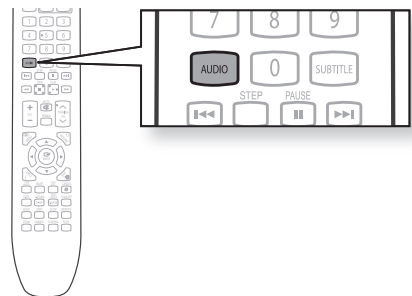


■ is displayed when there is one supported language on the disc.

Subtitle Display



Press the **SUBTITLE** button.

- Each time you press the button, your selection will toggle between **SUBTITLE (1/N, 2/N ...)** and **SUBTITLE OFF**.
- If the disc has only one subtitle file, it will be played automatically.
- See number 2 (Caption Function) below for more details concerning Subtitle usage with DivX discs.

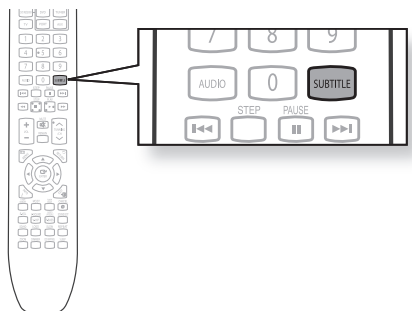




If the Disc has more than One Subtitle File

If the disc has more than one subtitle file, the default subtitle may not match the movie and you will have to select your subtitle language as follows:

1. In Stop mode, press the Cursor ▲, ▼ button, select the desired subtitle (⌨) from the TV screen, and then press the **ENTER** button.
2. When you select the desired DivX file from the TV screen, the movie will be played normally.

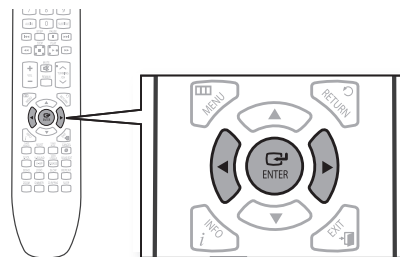

DivX(Digital internet video eXpress)

DivX is a video file format developed by Microsoft and is based on MPEG4 compression technology to provide audio and video data over the Internet in real-time.

MPEG4 is used for video encoding and MP3 for audio encoding so that the users can watch a movie at near DVD-quality video and audio.

1. Supported Formats

This product only supports the following media formats. If both video and audio formats are not supported, the user may experience problems such as broken images or no sound.

Supported Video Formats

Format	AVI	WMV
Supported Versions	DivX3.11~DivX5.1, XviD	V1/V2/V3/V7

Supported Audio Formats

Format	MP3	WMA	AC3
Bit Rate	80~384kbps	56~128kbps	128~384kbps
Sampling Frequency	44.1khz		44.1/48khz

- DivX files, including audio and video files, created in the DTS format can only support up to 6Mbps.
- Aspect Ratio : Although the default DivX resolution is 640x480 pixels, this product supports up to 800x600 pixels. TV screen resolutions higher than 800 will not be supported.
- When you play a disc whose sampling frequency is higher than 48khz or 320kbps, you may experience shaking on the screen during playback.

2. Caption Function

- You must have some experience with video extraction and editing in order to use this feature properly.
- To use the caption function, save the caption file (*.smi) in the same file name as that of the DivX media file (*.avi) within the same folder.
Example. Root Samsung_007CD1.avi
Samsung_007CD1.smi
- Up to 60 alphanumeric characters or 30 East Asian characters (2 byte characters such as Korean and Chinese) for the file name.
- ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified or DivX Ultra Certified device that plays DivX video. ABOUT DIVX VIDEO-ON-DEMAND: This DivX® Certified device must be registered in order to play DivX Video-on-Demand (VOD) content. First generate the DivX VOD registration code for your device and submit it during the registration process. [Important: DivX VOD content is protected by a DivX DRM (Digital Rights Management) system that restricts playback to registered DivX Certified devices. If you try to play DivX VOD content not authorized for your device, the message "Authorization Error" will be displayed and your content will not play.] Learn more at www.divx.com/vod
DivX® is a registered trademark of DivX, Inc., and is used under license



Playback

USING THE PLAYBACK FUNCTION

Displaying Disc Information

You can view disc playback information on the TV screen.

Press the **INFO** button.




- The disc information display may appear different, depending on the disc
- You can also select DTS, DOLBY DIGITAL, or PRO LOGIC, depending on the disc



appears on the TV screen!


If this symbol appears on the TV screen when pressing a button, that operation is not possible with the disc currently being played.

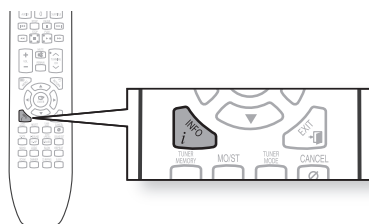

Checking the Remaining Time

Press the **REMAIN** button.

- For checking the total and remaining time of a title or chapter being played.

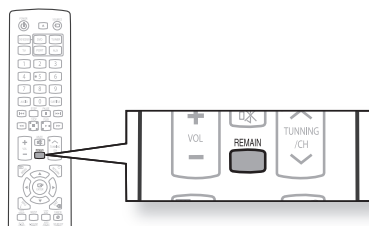

Each time the Remain button is pressed



TITLE ELAPSED → TITLE REMAIN → CHAPTER ELAPSED → CHAPTER REMAIN



TRACK ELAPSED → TRACK REMAIN → TOTAL ELAPSED → TOTAL REMAIN



TRACK REMAIN → TRACK ELAPSED

Fast Playback




Press the **◀◀, ▶▶** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

◀◀ 2X → 4X → 8X → 32X → **▶▶** PLAY

▶▶ 2X → 4X → 8X → 32X → **▶▶** PLAY

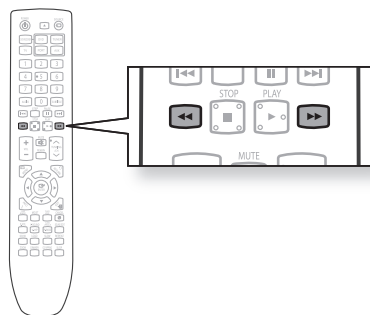

- During fast playback of a CD or MP3-CD, sound is heard only at 2x speed, and not at 4x, 8x, and 32x speeds.

Slow Playback




Press the **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

DVD 1/2 → 1/4 → 1/8 → 1/2 → 1/4 → 1/8 → **▶▶** PLAY

DivX 1/2 → 1/4 → 1/8 → **▶▶** PLAY

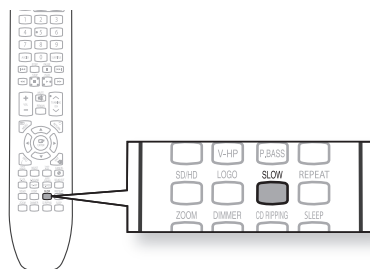


- No sound is heard during slow playback.
- Reverse slow playback does not work with DivX.

Skipping Scenes/Songs



Press the **◀◀, ▶▶** button.

- Each time the button is pressed during playback, the previous or next chapter, track or directory (file) will be played.

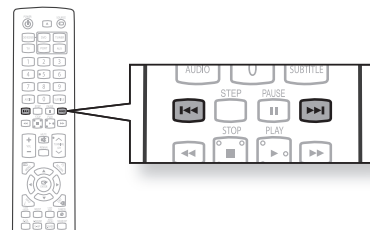

Playback

USING THE PLAYBACK FUNCTION (Con.)


Repeat Playback



Repeat playback allows you to repeatedly play a chapter, title, track (song), or directory (MP3 file).

Press the **REPEAT** button.

- Each time the button is pressed during playback, the repeat playback mode changes as follows:

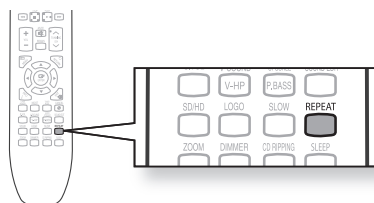

REPEAT : CHAPTER → **REPEAT : TITLE** → **REPEAT : OFF**



REPEAT : TRACK → **REPEAT : DISC** → **REPEAT : OFF**



REPEAT : OFF → **REPEAT : RANDOM** → **REPEAT : TRACK** → **REPEAT : DIR**
→ **REPEAT : DISC** → **REPEAT : OFF**

CHAPTER : Repeatedly plays the selected chapter.

TITLE : Repeatedly plays the selected title.

RANDOM : Plays tracks in random order. (A track that has already been played may be played again.)

TRACK : Repeatedly plays the selected track.

DIR : Repeatedly plays all tracks in the selected folder.


DISC : Repeatedly plays the entire disc.

OFF : Cancels Repeat Playback.

To Select a Repeat Playback Mode on the disc Information Screen



- Press the **INFO** button twice.
- Press the Cursor **▶** button to move to **REPEAT PLAYBACK** (↺) display.
- Press the Cursor **▼** button to select the desired Repeat Playback mode.
 - To select another album and track, repeat Steps 2 and 3 above.
- Press the **ENTER** button.

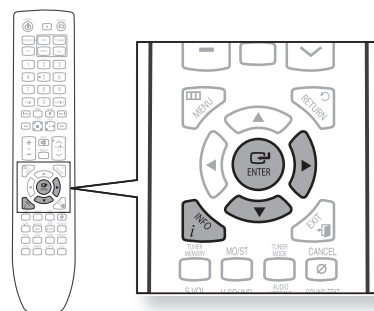

OFF → **A-** → **CHAP** → **TITLE** → **OFF**



OFF → **A-** → **TRACK** → **DISC** → **OFF**




- For DivX, MP3 and JPEG discs, you cannot select Repeat Play from the information display screen.

A-B Repeat Playback



You can repeatedly play back a designated section of a DVD.

1. Press the **INFO** button twice.
2. Press the Cursor **▶** button to move to REPEAT PLAYBACK (↺) display.
3. Press the Cursor **▲, ▼** button to select **A-** and then press the **ENTER** button.
 - When the **ENTER** button is pressed, the selected position will be stored in memory.
4. Press the **ENTER** button at the end of the desired segment.
 - The specified segment will be played repeatedly.

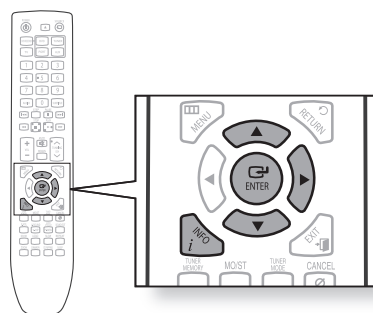

DVD ◀ EN 1/3 X-REPEAT OFF/ 02 ↺ A-B

➤ To return to normal playback, press the Cursor **▲, ▼** button to select **↺ OFF**.




■ The A-B Repeat function does not operate with DivX, MP3 or JPEG discs.

Step Function



Press the **STEP** button.

- The picture moves forward one frame each time the button is pressed during playback.

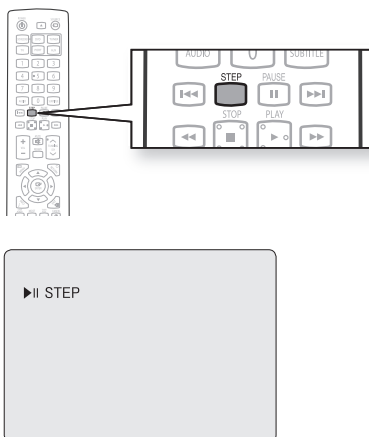

■ No sound is heard during step motion playback.

Playback

USING THE PLAYBACK FUNCTION (Con.)


Angle Function



This function allows you to view the same scene in different angles.

1. Press the **INFO** button.
2. Press the Cursor **▶** button to move to **ANGLE** ().
3. Press the Cursor **▲**, **▼** button or numeric buttons to select the desired angle.
 - Each time the button is pressed, the angle changes as follows:

1/3 → **2/3** → **3/3** → **1/3**

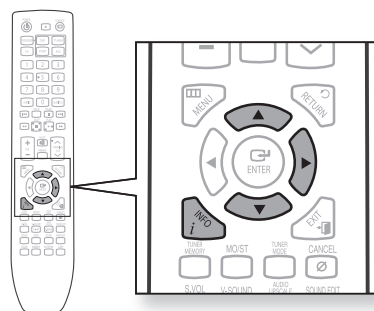

- The Angle function works only with discs on which multiple angles have been recorded.


Zoom (Screen Enlarge) Function



This function allows you to enlarge a particular area of the displayed image.

1. Press the **ZOOM** button.
2. Press the Cursor **▲**, **▼**, **◀**, **▶** button to move to the area you want to enlarge.
3. Press the **ENTER** button.
 - Each time the button is pressed, the zoom level changes as follows:

ZOOM X 1.5 → **ZOOM X 2** → **ZOOM X 3**
→ **ZOOM OFF**

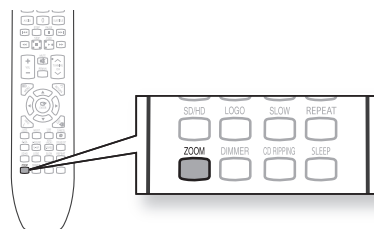


Audio Language Selection Function




1. Press the **INFO** button twice.
2. Press the Cursor **▲**, **▼** button or numeric buttons to select the desired audio language.
 - A different audio language (ENGLISH, SPANISH, FRENCH, etc.) is selected each time the button is pressed, depending on the number of languages on a DVD disc.

EN 1/3 → **SP 2/3** → **FR 3/3** → **EN 1/3**

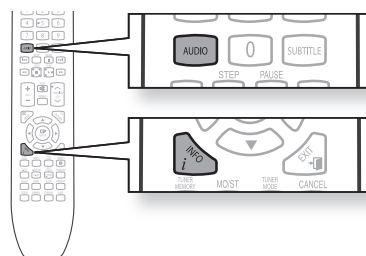


- To operate this function, you can also press the AUDIO buttons on the remote control.
- The Audio Language functions may not be available, depending on the disc.

Subtitle Language Selection Function

1. Press the **INFO** button twice.
2. Press the Cursor **▶** button to move to **SUBTITLE** () display.
3. Press the Cursor **▼** button or numeric buttons to select the desired subtitle.

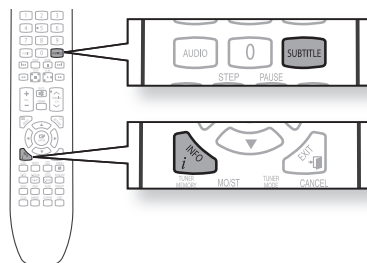


EN 01/03 → SP 02/03 → FR 03/03 → OFF/03 →
EN 01/03




- To operate this function, you can also press the SUBTITLE buttons on the remote control.
- The Subtitle Language functions may not be available, depending on the disc.


Moving Directly to a Scene/Song




1. Press the **INFO** button.
2. Press the Cursor **▲, ▼** button or numeric buttons to select the desired title/track () and then press the **ENTER** button.
3. Press the Cursor **◀, ▶** button to move to the Chapter () display.
4. Press the Cursor **▲, ▼** button or numeric buttons to select the desired chapter and then press the **ENTER** button.
5. Press the Cursor **◀, ▶** button to move to time () display.
6. Press the numeric buttons to select the desired time and then press the **ENTER** button.

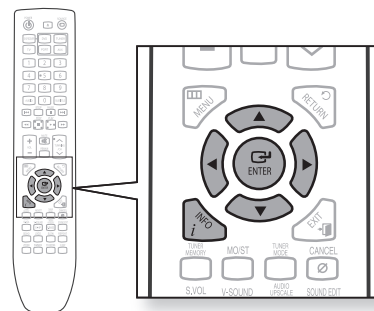

Press the **numeric** buttons.

 - The selected file will be played.
- When playing an MP3 or JPEG disc, you cannot use the Cursor **▲, ▼** button to move to a folder.
To move a folder, press the **STOP** () and then press the Cursor **▲, ▼** button.

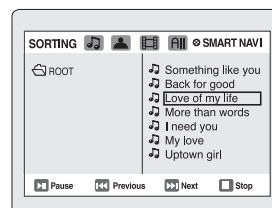

- You can press the **◀◀, ▶▶** button on the remote control to move directly to the desired title, chapter, or track.
- You may not be able to move to the selected title or time, depending on the disc.

Playback

USING THE PLAYBACK FUNCTION (Con.)

Using the Disc Menu




You can use the menus for the audio language, subtitle language, profile, etc.

DVD menu contents differ from disc to disc.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▲**, **▼** button to move to **Disc Menu** and then press the **ENTER** button.
 - When you select Disc Menu and it is not supported by the disc, the "**This menu is not supported**" message appears on the screen.
3. Press the Cursor **▲**, **▼**, **◀**, **▶** button to select the desired item.
4. Press the **ENTER** button.

➤ Press the **EXIT** button to exit the setup screen.

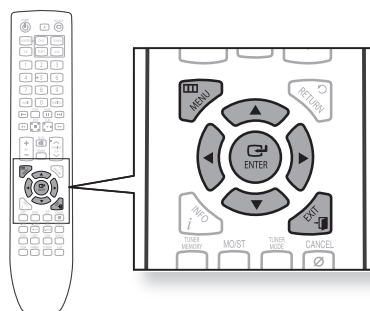

■ The disc menu display may be different depending on the disc.


Using the Title Menu



For DVDs containing multiple titles, you can view the title of each movie. The availability of this feature may vary, depending on the disc.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▲**, **▼** button to move to **Title Menu**.
3. Press the **ENTER** button.
 - The title menu appears.

➤ Press the **EXIT** button to exit the setup screen.

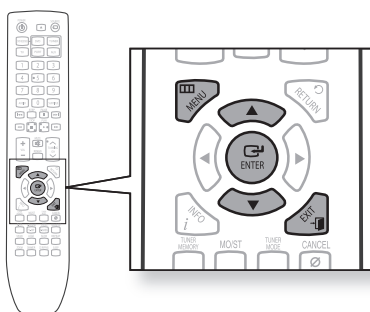

■ The Title menu display may be different depending on the disc.



USING THE iPod

You can enjoy playback of your iPod using the supplied remote control.

Listening to Music (OSD IPOD function)

You can play music files stored in the iPod player by connecting it to the DVD Home Cinema.

1. Connect the iPod dock connector to the iPod jack on the DVD Home Cinema.
2. Place the iPod in the Dock.
 - Your iPod is automatically turned on.
3. Press the **PORT** button on the remote control to select **OSD IPOD** mode.
 - If the iPod player is connected to the DVD Home Cinema, each time you press the **PORT** button, it will be toggled in the order of **USB** → **OSD IPOD** → **V/P IPOD**.
4. Press the **▲**, **▼** buttons on the remote control to select **Music** and press the **ENTER** button.
 - The **Music** categories appear.
5. Press the **▲**, **▼** buttons desired category and press the **ENTER** button.
 - The music files appear.
6. Press the **▲**, **▼** buttons desired category and press the **ENTER** button.
 - The music will start with a new screen which shows the song title, time, artist, and progress bar.
7. You can use the remote control or main unit to control simple playback functions such as **PLAY**, **PAUSE**, **STOP**, **◀/▶**, **⏮/⏭** and **REPEAT**.
 - Press the **RETURN** button to return to the previous menu.

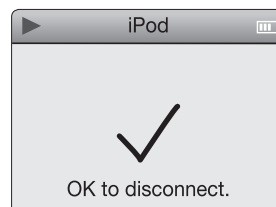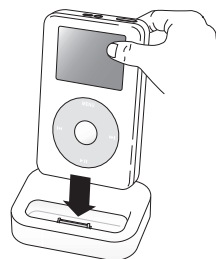

- See page 21 for compatible iPods.
Compatibility depends on the software version of your iPod.

Music categories

File information including the artist name, album name, music title and genre will be displayed according to the ID3 Tag information on the appropriate music file.

Now Playing : Plays a recently played file or moves to the playback screen of the current file.

Artists : To play by artist.

Songs : To play in numeric or alphabetical order

Playlists : To play by Playlist.

Albums : To play by album.

Genres : To play by genre.

Composer : To play by composer.




- The category list may differ, depending on the iPod model.
- **What is an ID3 Tag?**
This is what is attached to an MP3 to carry information relevant to the file such as the title, artist, album, year, genre and a comment field.

Playback


Watching a Movie (V/P IPOD function)

You can play video or picture files stored in the iPod player by connecting it to the DVD Home Cinema.

1. Connect the iPod dock connector to the iPod jack on the DVD Home Cinema.
2. In the iPod screen, move to **Videos > Settings** and set the **TV Out** option to **On** for iPod class/nano or select **YES** when "Display on TV" pops up in the screen for iPod touch/iPhone.
3. Place the iPod in the Dock.
4. Press the **PORT** button on the remote control to select **V/P IPOD** mode.
 - If the iPod player is connected to the DVD Home Cinema, each time you press the **PORT** button, it will be toggled in the order of **USB → OSD IPOD → V/P IPOD**.
5. Set the AV IN option of the TV connected to the DVD Home Cinema to COMPOSITE.

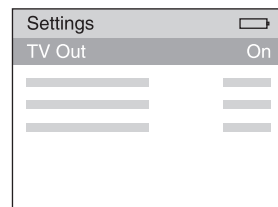


<iPod Screen>

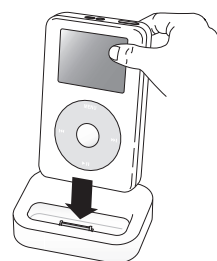

Follow the iPod onscreen guide through the following steps.

6. Press the **▲, ▼** on the remote control to select **Videos** and press the **ENTER** button.
7. Press the **▲, ▼** buttons on the remote control to select **Movies** and press the **ENTER** button.
8. Press the **▲, ▼** buttons to select the file to play and press the **ENTER** button.
 - Video files of the iPod player will be played on the TV screen.
9. You can use the remote control or main unit to control simple playback functions such as **PLAY, PAUSE, STOP, ◀▶** and **◀▶**.
 - If you press the **PREV** button within 3 seconds after the playback, the player will stop playing and return to the list screen.
 - If you press the **PREV** button 3 seconds or later after the playback, the player will move to the start screen of the current file.
 - Press the **NEXT** button to stop playing and return to the list screen.
 - Press the **RETURN** button to return to the previous menu.

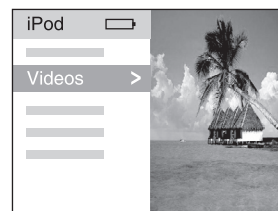

<iPod Screen>



- See page 21 for compatible iPods.
Compatibility depends on the software version of your iPod.
- When the current file is played to the end, the next file will not be played automatically.
To play the next file, select a file to play in the list screen of the iPod player.
- You must have the VIDEO output connected to your TV to view iPod video.
- Only the iPod's playback screen will appear on your TV. The iPod menu screens will not appear.




- If the TV connected to the DVD Home Cinema supports HDMI CEC, press the **AUX** button on the remote control to switch the mode to **DIGITAL IN** if you want to watch TV while an iPod movie is played.
- Some keys or functions of the remote control may not be supported depending on the iPod device and software version of the iPod.
- Some abnormal or duplicated screen may be displayed when you watch iPod Video Clip if you set music options as 'Now Playing' in the photo settings of the iPod photo section.
- Some abnormal sound might be heard depending on the iPod model or S/W version of the iPod.

PLAYING MEDIA FILES USING THE USB HOST FEATURE

You can enjoy media files such as pictures, movies and music saved on an MP3 player, USB memory stick or digital camera in high quality video by connecting the storage device to the USB port of the Home Cinema.


1. Connect the USB device to the USB port on the side of the unit.
2. Press the **FUNCTION** button on the Home Cinema System or the **PORT** button on the remote control to select the USB mode.
 - **USB** appears on the display screen and then disappears.
 - The USB MENU screen appears on the TV screen and the saved file is played.
3. To stop playback, press the **STOP** (■) button.

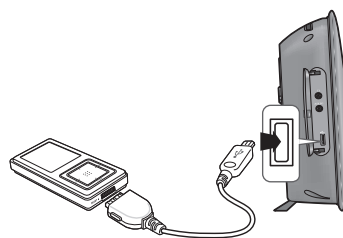

Safe USB Removal

To prevent damage to the data stored in the USB device, perform safe removal before disconnecting the USB cable.


- Press the **STOP** (■) button twice in a row.
The display will show **REMOVE USB**.
- Remove the USB cable.

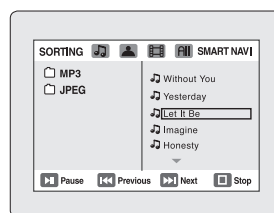

Skip Forward/Back

During playback, press the **⏮, ⏭** button.

- When there is more than one file and you press the **⏭** button, the next file is selected.
- When there is more than one file and you press the **⏮** button, the previous file is selected.

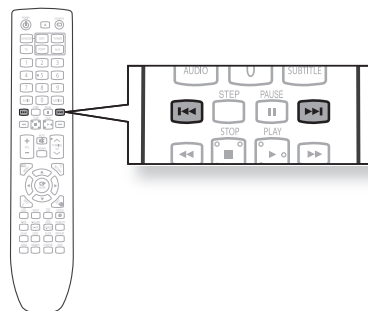


Fast playback

During playback, press the **⏮, ⏭** button.

- Each time you press either button, the playback speed will change as follows:

2x → 4x → 8x → 32x → Normal.

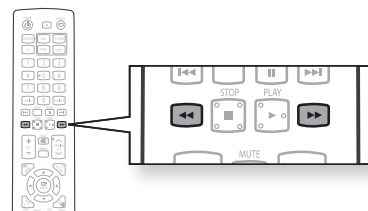

PLAYING MEDIA FILES USING THE USB HOST FEATURE (Con.)

USB Host Specification

USB Host Specification	<ul style="list-style-type: none"> • Supports USB 1.1 or USB 2.0 compliant devices. • Supports devices connected using the USB A type cable. • Supports UMS (USB Mass Storage Device) V1.0 compliant devices. • Supports the device of which the connected drive is formatted in the FAT(FAT, FAT16, FAT32) file system.
Non-compliance	<ul style="list-style-type: none"> • Does not support a device that requires installing a separate driver on the PC (Windows). • Does not support connection to a USB hub. • A USB device that is connected using the USB extension cable may not be recognized. • A USB device requiring a separate power source needs to be connected to the player with the separate power connection.
Operational Limitations	<ul style="list-style-type: none"> • If the connected device has multiple drives (or partitions) installed, only one drive (or partition) can be connected. • A device supporting USB 1.1 alone may cause a difference in the picture quality, depending on the device.

Compliant Devices

1. USB Storage Device
2. MP3 Player
3. Digital Camera
4. Removable HDD
 - Removable HDDs equipped with less than 160 Gbytes are supported. Removable HDDs equipped with 160Gbytes or more may not be recognized, depending on the device.
 - If the connected device does not work due to insufficient power supply, you can use a separate power cable to supply power so that it can work properly. The connector of the USB cable may differ, depending on the manufacturer of the USB device.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader.
 - The USB card reader may not be supported, depending on the manufacturer.
 - If you install multiple memory devices into a multi card reader, you may experience problems.

Compliant File Formats

Format	File name	File extension	Bit rate	Version	Pixel	Sampling Frequency
Still Picture	JPG	JPG .JPEG	—	—	640x480	—
Music	MP3	.MP3	80~384kbps	—	—	44.1kHz
	WMA	.WMA	56~128kbps	V8	—	44.1kHz
Movie	WMV	.WMV	4Mbps	V1,V2,V3,V7	720x480	44.1kHz~48kHz
	DivX	.AVI,.ASF	4Mbps	DivX3.11~DivX5.1, XviD	720x480	44.1kHz~48kHz

- CBI (Control/Bulk/Interrupt) is not supported.
- Digital Cameras that use PTP protocol or require additional program installation when connected to a PC are not supported.
- A device using NTFS file system is not supported. (Only FAT 16/32 (File Allocation Table 16/32) file system is supported.)
- Does not operate with Janus enabled MTP (Media Transfer Protocol) devices.

System setup

For your convenience, you can set this Home Cinema's features for the best use in your home environment.



SETTING THE LANGUAGE

OSD(On-Screen Display) language is set to English by default.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▼** button to move to **Setup** and then press the **ENTER** or **►** button.
3. Select **Language** and then press the **ENTER** or **►** button.
4. Press the Cursor **▲,▼** button to select **OSD Language** and then press the **ENTER** or **►** button.
5. Press the Cursor **▲,▼** button to select the desired language and then press the **ENTER** button.
 - Once the setup is complete, the OSD will be English if English has been selected as the language.

- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.

- **OSD LANGUAGE** : Selecting the OSD Language
- **AUDIO** : Selecting the Audio Language (recorded on the disc)
- **SUBTITLE** : Selecting the Subtitle Language (recorded on the disc)
- **DISC MENU** : Selecting the Disc Menu Language (recorded on the disc)
- ※ If the language you selected is not recorded on the disc, menu language will not change even if you set it to your desired language.
- **OTHERS** : To select another language, select OTHERS and enter the language code of your country (see page 56). AUDIO, SUBTITLE and DISC MENU language can be selected.

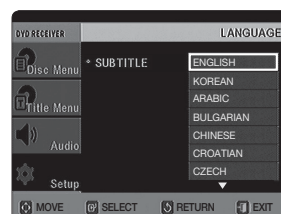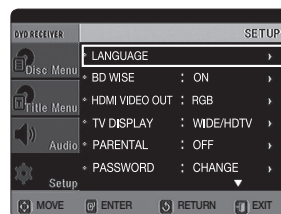


SETING THE HDMI VIDEO OUT MODE

Selects the type of output from the HDMI/OUT jack.

- **YCbCr** : Normally, select this when connecting to an HDMI device.
- **RGB** : Gives brighter colours and deeper blacks. Select this if colours are weak.

1. In Stop mode, press the **MENU** button.
 2. Press the Cursor **▼** button to move to **Setup** and then press the **ENTER** button.
 3. Press the Cursor **▼** button to move to **HDMI VIDEO OUT** and then press the **ENTER** button.
 4. Press the Cursor **▲,▼** button to select the desired item and then press the **ENTER** button.
 - Once the setup is complete, you will be taken to the previous screen.
- Press the **RETURN** button to return to the previous level.
 - Press the **EXIT** button to exit the setup screen.

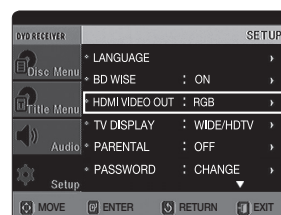


System setup

SETTING TV SCREEN TYPE

You can select the TV's aspect ratio, depending on your TV type (Wide Screen or conventional 4:3).

1. In Stop mode, press the **MENU** button.
 2. Press the Cursor **▼** button to move to **Setup** and then press the **ENTER** or **►** button.
 3. Press the Cursor **▼** button to move to **TV DISPLAY** and then press the **ENTER** or **►** button.
 4. Press the Cursor **▲,▼** button to select the desired item and then press the **ENTER** button.
 - Once the setup is complete, you will be taken to the previous screen.
- Press the **RETURN** button to return to the previous level.
➤ Press the **EXIT** button to exit the setup screen.

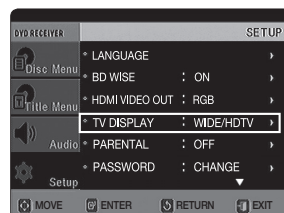

Adjusting the TV Aspect Ratio (Screen Size)

The horizontal to vertical screen size ratio of conventional TV's is 4:3, while that of widescreen and high definition TV's is 16:9. This ratio is called the aspect ratio. When playing DVDs recorded in different screen sizes, you should adjust the aspect ratio to fit your TV or monitor.

For a standard TV, select either **4:3PS** or **4:3LB** option according to personal preference. Select **WIDE/HD TV** if you have a widescreen TV.

4:3PS (4:3 Pan&Scan)

Select this to play a 16:9 picture in the pan & scan mode on a conventional TV.

- You can see the central portion of the screen only (with the sides of the 16:9 picture cut off).



4:3LB (4:3 Letterbox)

Select this to play a 16:9 picture in the letter box mode on a conventional TV.

- Black bars will appear at the top and bottom of the screen.



WIDE/HD TV

Select this to view a 16:9 picture in the full-screen mode on your widescreen TV.

- You can enjoy the widescreen aspect.



- If a DVD is in the 4:3 ratio, you cannot view it in widescreen.
- Since DVD discs are recorded in various image formats, they will look different depending on the software, the type of TV, and the TV aspect ratio setting.
- When using HDMI, the screen is automatically converted to Wide mode.

SETTING PARENTAL CONTROLS (RATING LEVEL)



Use this to restrict playback of adult or violent DVDs you do not want children to view.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▼** button to move to **Setup** and then press the **ENTER** or **►** button.
3. Press the Cursor **▼** button to move to **PARENTAL** and then press the **ENTER** or **►** button.
4. Press the Cursor **▲,▼** button to select the desired rating level and then press the **ENTER** button.
 - If you have selected Level 6, you cannot view DVDs with Level 7 or higher.
 - The higher the level, the closer the content is to violent or adult material.
5. Enter the password and then press the **ENTER** button.
 - The password is set to "7890" by default.
 - Once the setup is complete, you will be taken to the previous screen.

- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.



■ This function works only if a DVD disc contains rating level information.

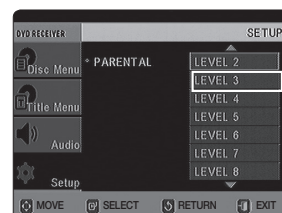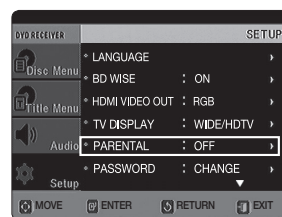


SETTING THE PASSWORD

You can set the password for the Parental (rating level) setting.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▼** button to move to **Setup** and then press the **ENTER** or **►** button.
3. Press the Cursor **▼** button to move to **PASSWORD** and then press the **ENTER** or **►** button.
4. Press the **ENTER** button.
5. Enter the password and then press the **ENTER** button.
 - Enter the old password, a new password, and confirm new password.
 - The setting is complete.



■ The password is set to "7890" by default.

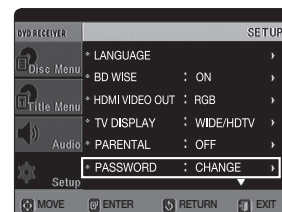

If you have forgotten the rating level password, do the following

- While the player is in No Disc mode, hold the Home Cinema Systems **STOP** (■) button for longer than 5 seconds. **INITIAL** appears on the display and all settings will return to the default values.
- Press the **POWER** button.

Using the **RESET** function will erase all stored settings.
Do not use this unless necessary.



System setup

SETTING THE WALLPAPER



While watching a DVD or JPEG CD, you can set the image you like as background wallpaper.

1. During playback, press the **PAUSE** () button when an image you like appears.
2. Press the **LOGO** button.
 - **COPY LOGO DATA** will be displayed on the TV screen.
3. The power will turn off and then back on.
 - The selected wallpaper will be displayed.
 - You can select up to 3 wallpaper settings.

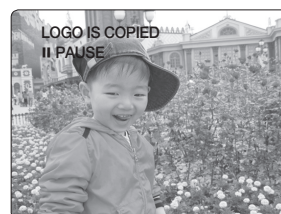
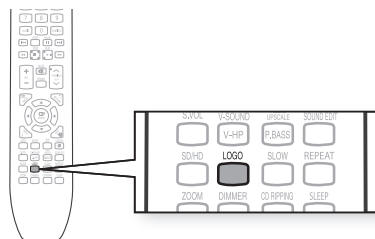


TO SELECT ONE OF THE 3 WALLPAPER SETTINGS YOU'VE MADE

1. In Stop mode, press the **MENU** button.
2. Press the Cursor button to move to **Setup** and then press the **ENTER** or button.
3. Press the Cursor button to move to **LOGO** and then press the **ENTER** or button.
4. Press the Cursor , button select the desired **USER**, and then press the **ENTER** button.
 - This selects one of the 3 wallpaper screens.
5. Press the **EXIT** button to exit the setup screen.

- **ORIGINAL** : Select this to set the Samsung Logo image as your wallpaper.
- **USER** : Select this to set the desired image as your wallpaper.

- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.

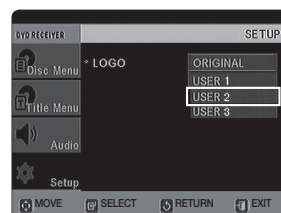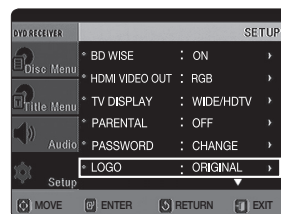

DviX (R) Registration



Please use the Registration code to register this Home Cinema System with the DivX(R) Video On Demand format. For more information, visit www.divx.com/vod

SETTING THE DRC (DYNAMIC RANGE COMPRESSION)

This feature balances the range between the loudest and quietest sounds. You can use this function to enjoy Dolby Digital sound when watching movies at low volume at night.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▼** button to move to **Audio** and then press the **ENTER** or **►** button.
3. Press the Cursor **▼** button to move to **DRC** and then press the **ENTER** or **►** button.
4. Press the Cursor **▲,▼** to adjust the **DRC**.
 - When the Cursor **▲** button is pressed, the effect is greater, and when the Cursor **▼** button is pressed, the effect is smaller.

- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.

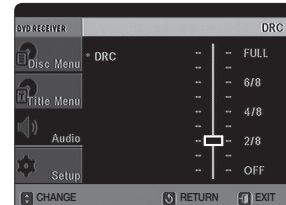
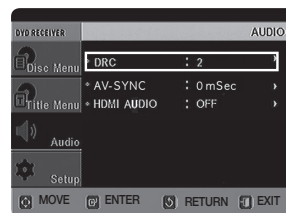


SETTING THE AV SYNC

Video may look slower than the audio if it is connected to a digital TV. If this occurs, adjust the audio delay time to match the video.

1. In Stop mode, press the **MENU** button.
2. Press the Cursor **▼** button to move to **Audio** and then press the **ENTER** or **►** button.
3. Press the Cursor **▼** button to move to **AV-SYNC** and then press the **ENTER** or **►** button.
4. Press the Cursor **▲,▼** button to select the AV-SYNC Delay Time and then press the **ENTER** button.
 - You can set the audio delay time between 0 ms and 300 ms. Set it to the optimal status.

- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.

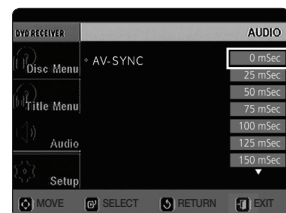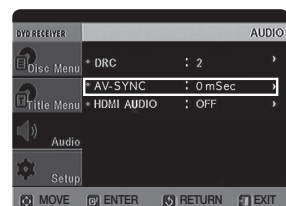


System setup

SETTING THE HDMI AUDIO

The audio signals transmitted over the HDMI Cable can be toggled ON/OFF.

1. In Stop mode, press the **MENU** button.
 2. Press the Cursor **▼** button to move to **Audio** and then press the **ENTER** or **▶** button.
 3. Press the Cursor **▼** button to move to **HDMI AUDIO** and then press the **ENTER** or **▶** button.
 4. Press the Cursor **▲,▼** button to select **ON** or **OFF** and then press the **ENTER** button.
- **ON** : Both video and audio signals are transmitted over the HDMI connection cable, and audio is output through your TV speakers only.
 - **OFF** : Video is transmitted over the HDMI connection cable only, and audio is output through the home cinema speakers only.
- Press the **RETURN** button to return to the previous level.
- Press the **EXIT** button to exit the setup screen.

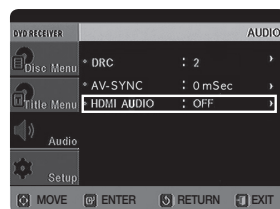

- The default setting of this function is HDMI AUDIO OFF.
- HDMI AUDIO is automatically down-mixed to 2ch for TV speakers.

SETTING THE AUDIO

Manually Adjusting the Speaker Volume and Balance with the SOUND EDIT Button.

Press the **SOUND EDIT** button and then press the Cursor **◀,▶** button.




Adjusting Front Speaker Balance

- You can select between 00, -06, and OFF.
- The volume decreases as you move closer to -6.

Adjusting Subwoofer Speaker Level

- The volume level can be adjusted in steps from +6dB to -6dB.
- The sound gets louder as you move closer to +6dB and quieter as you get closer to -6dB.

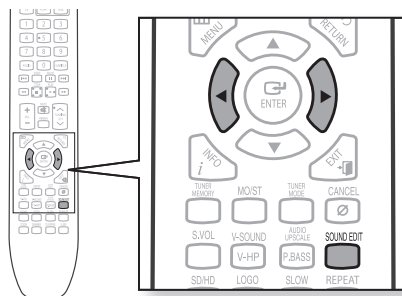


Radio

LISTENING TO RADIO


Remote Control

1. Press the **TUNER** button to select the FM band.
2. Tune in to the desired station.
 - **Automatic Tuning 1** : Press the **TUNER MODE** button to select **PRESET** and then press the **▲**, **▼** button to select the preset station.
 - **Automatic Tuning 2** : Press the **TUNER MODE** button to select **MANUAL** and then press and hold the **▲**, **▼** button to automatically search the band.
 - **Manual Tuning** : Press the **TUNER MODE** button to select **MANUAL**. Briefly press the **▲**, **▼** button to increase or decrease the frequency incrementally.

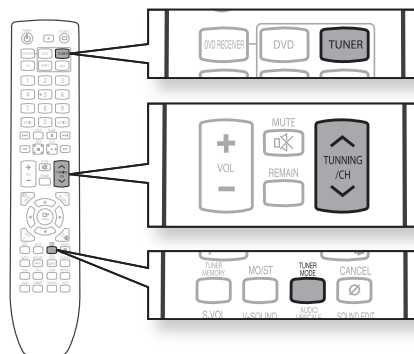

Main Unit

1. Press the **FUNCTION** button to select the FM band.
2. Select a broadcast station.
 - **Automatic Tuning 1** : Press the **STOP** (■) button to select **PRESET** and then press the **◀▶** button to select the preset station.
 - **Automatic Tuning 2** : Press the **STOP** (■) button to select **MANUAL** and then press and hold the **◀▶** button to automatically search the band.
 - **Manual Tuning** : Press the **STOP** (■) button to select **MANUAL** and then briefly press the **◀▶** button to tune in to a lower or higher frequency.

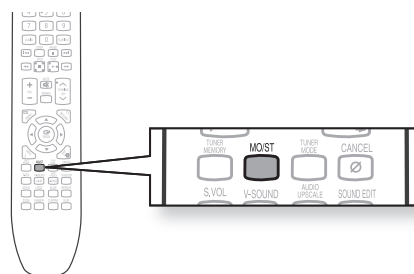


Press the **MO/ST** button to listen in Mono/Stereo.

- Each time the button is pressed, the sound switches between **STEREO** and **MONO**.
- In a poor reception area, select **MONO** for a clear, interference-free broadcast.

PRESETTING STATIONS

Example : Presetting FM 89.10 in the memory

1. Press the **TUNER** button to select the FM band.
2. Press the **TUNER MODE** button to select **MANUAL**.
3. Press the **▲**, **▼** button to select **89.10**.
4. Press the **TUNER MEMORY** button.
 - **01** flashes in the display.
5. Press the **▲**, **▼** button to select preset number.
 - You can select between 1 and 15 presets.
6. Press the **TUNER MEMORY** button again.
 - Press the **TUNER MEMORY** button before **Number** disappears from the display.
 - **Number** disappears from the display and the station is stored in memory.
7. To preset another station, repeat steps 3 to 6.

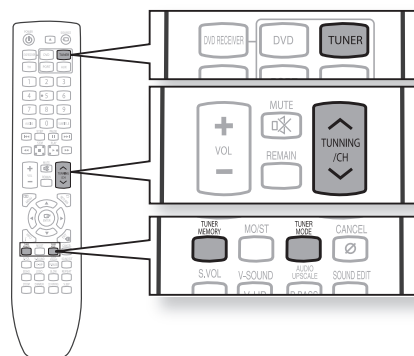

To tune in to a preset station

- Press the **TUNER MODE** button to select **PRESET**.
- Press the **▲**, **▼** button on the remote control to select a channel.



■ This unit does not receive AM(MW) broadcasts.


Convenient function

MUTE FUNCTION

This is useful when answering a doorbell or telephone call.

Press the **MUTE** button.

- **MUTE** appears in the display.
- To restore the sound, press the **MUTE** button again.

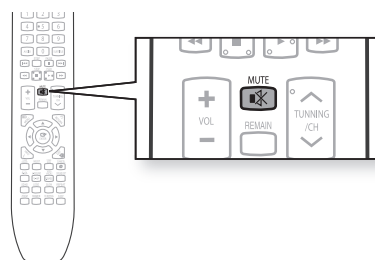

SLEEP TIMER FUNCTION

You can set the time that the Home Cinema will shut itself off.

Press the **SLEEP** button.


- **SLEEP** will be displayed. Each time the button is pressed, the preset time changes as follows :

→ 10 → 20 → 30 → 60 → 90 → 120 → 150 → OFF

To confirm the sleep timer setting, press the **SLEEP** button.

- The remaining time before the Home Cinema will shut itself off is displayed.
- Pressing the button again changes the sleep time from what you have set earlier.

To cancel the sleep timer, press the **SLEEP** button until **OFF** appears on the display.

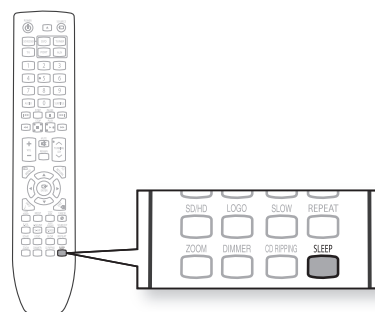


ADJUSTING DISPLAY BRIGHTNESS

You can adjust the brightness of the display on the main unit so it won't interfere with your movie viewing.

Press the **DIMMER** button.

- Each time the button is pressed, the front display brightness will be adjusted.

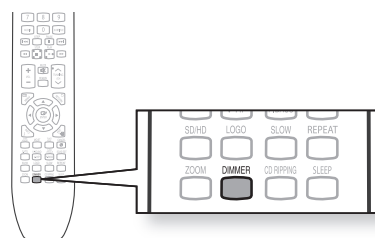


V-SOUND (VIRTUAL SOUND)

Produces realistic sound through 2-channel audio with the aid of virtual effects, this gives the user the feeling like they are listening to 5.1 channel audio.

Press the **V-SOUND** button.

- Each time the button is pressed, the selection changes as follows :

V.SO ON → **V.SO OFF**

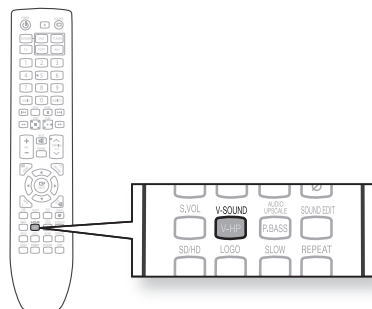

VIRTUAL HEADPHONE FUNCTION

Use headphones (3.5Ø) (not supplied) for private listening pleasure. You can enjoy dynamic sound effects similar to that of 5.1 channel surround sound using conventional stereo headphones.



1. Plug the headphones into the headphone jack.

- You can purchase headphones from most Electronics stores.

2. Press the **V-H/P** button.

- Each time the button is pressed, the selection alternates between **V.HP:ON** and **V.HP:OFF**.

- V.HP:ON** : Select to enjoy a 5.1-channel surround sound that gives the feeling of being in a stadium or concert hall.
- V.HP:OFF** : Select to listen to a standard 2-channel stereo sound.

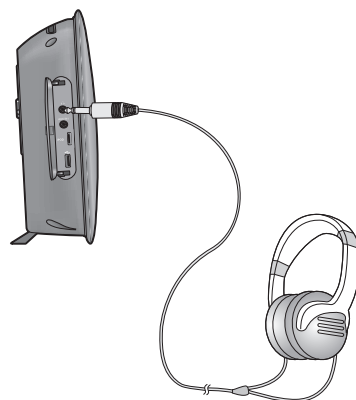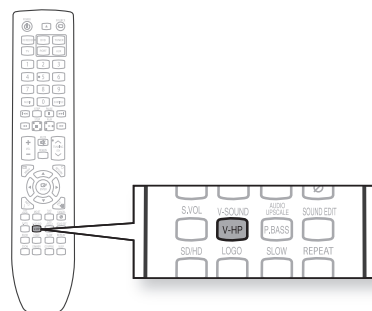

- Do not listen at extremely high volume levels when using headphones. Extended, high-volume listening can lead to permanent hearing loss.

Convenient function


S.VOL (SMART VOLUME)

This will regulate and stabilize the volume level against a drastic volume change in case of a channel change or scene transition.

Press the **S.VOL** button.

- Each time the button is pressed, the selection changes as follows :

S.VOL ON → **S.VOL OFF**

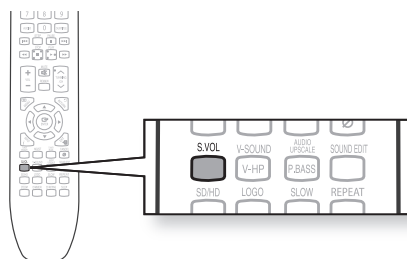

P.BASS/AUDIO UPSCALING


P.BASS

P.BASS function stresses low tones providing thudding sound effects.

Press the **P.BASS/AUDIO UPSCALE** button to select **P.BASS** mode.

- Each time the button is pressed, the selection changes as follows :

P BAS ON → **UPSC ON** → **OFF**

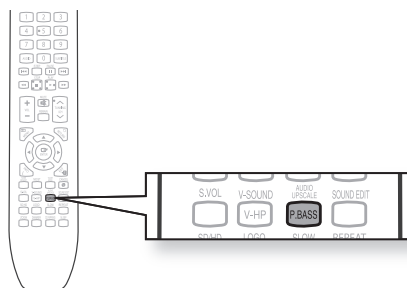

AUDIO UPSCALING


This also helps enhance your sound experience (ex. mp3 music).

You can upscale your MP3 level sound(24 kHz, 8bit) to CD level sound(44.1 kHz, 16bit).

Press the **P.BASS/AUDIO UPSCALE** button to select **AUDIO UPSCALE** mode.

- Each time the button is pressed, the selection changes as follows :

P BAS ON → **UPSC ON** → **OFF**

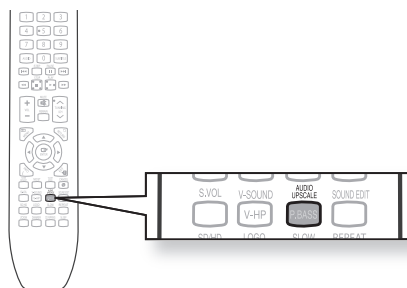



- The P.BASS function is only available with 2 channel LPCM sources such as mp3, Divx, cd and wma. Press P.BASS button and "POWER BASS ON" will be displayed on the screen.

BASIC USE CD RIPPING

Converts audio sound of the CD into a MP3 file format before sending to a USB storage device.



1. Connect the USB device.
2. Insert the audio CD into the CD tray.
3. Press the **CD RIPPING** button.
 - To start ripping the current track, press the **CD RIPPING** button on the remote control while the system is playing a track or stopped temporarily.
 - To rip the whole tracks of the CD, press and hold the **CD RIPPING** button on the remote control.
 - The system displays a message of "CD RIPPING" on the display and starts ripping.
4. Press the **STOP** (■) button to stop ripping.
 - When the CD ripping is done, a directory named "RIPPING" will be created in the USB device and the ripped file will be saved in a format of "SAM_XXXX".mp3".

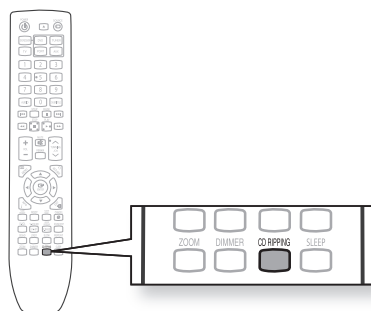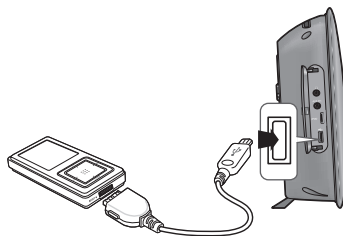

- Do not disconnect the USB connection or the power cable during the CD ripping. Otherwise, it may cause damage to the data. To stop CD ripping, press the **STOP** button and disconnect the USB device after the system stops playing the CD completely.
- If you disconnect the USB connection during the CD ripping, the system will turn off and you will not be able to delete the ripped file. In this case, connect to a PC using the USB cable, and back up the data and format the USB device.
- If you connect the USB device to the system while it is playing a CD, the system stops playing and will resume playing when the initialization of the USB connection is completed. (The initialization time may differ depending on the type of the USB device.)
- The feature of CD RIPPING is not applied to the DTS-CD.
- If the ripping duration is less than 5 seconds, a ripping file may not be created.
- CD ripping is enabled only if the USB device or the HDD is formatted in the FAT file system. (The NTFS file system is not supported.) For a list of compliant devices, refer to the specification of the USB host.
- The ripping is performed in a normal speed of x1 and the ripping time may be extended for some USB devices.
- While the system is ripping a CD, the audio sound will not be output.
- Do not put force on the system while it is ripping a CD.

Troubleshooting

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics Service Centre.

SYMPTOM	Check/Remedy
I cannot eject the disc.	<ul style="list-style-type: none"> • Is the power cord plugged securely into the outlet? • Turn off the power and then turn it back on.
Playback does not start.	<ul style="list-style-type: none"> • Check the region number of the DVD. DVD discs purchased from abroad may not be playable. • CD-ROMs and DVD-ROMs cannot be played on this Home Cinema System. • Make sure that the rating level is correct.
Playback does not start immediately when the Play/Pause button is pressed.	<ul style="list-style-type: none"> • Are you using a deformed disc or a disc with scratches on the surface? • Wipe the disc clean.
Sound is not produced.	<ul style="list-style-type: none"> • No sound is heard during fast playback, slow playback, and step motion playback. • Are the speakers connected properly? Is the speaker setup correctly customized? • Is the disc severely damaged?
The remote control does not work.	<ul style="list-style-type: none"> • Is the remote control being operated within its operation range of angle and distance? • Are the batteries exhausted? • Have you selected the mode(TV/DVD) functions of the remote control (TV or DVD) correctly?
<ul style="list-style-type: none"> • Disc is rotating but no picture is produced. • Picture quality is poor and picture is shaking. 	<ul style="list-style-type: none"> • Is the TV power on? • Are the video cables connected properly? • Is the disc dirty or damaged? • A poorly manufactured disc may not be playable.
Audio language and subtitles do not work.	<ul style="list-style-type: none"> • Audio language and subtitles will not work if the disc does not contain them.
Menu screen does not appear even when the menu function is selected.	<ul style="list-style-type: none"> • Are you using a disc that does not contain menus?
Aspect ratio cannot be changed.	<ul style="list-style-type: none"> • You can play 16:9 DVDs in 16:9 WIDE mode, 4:3 LETTER BOX mode, or 4:3 PAN SCAN mode, but 4:3 DVDs can be seen in 4:3 ratio only. Refer to the DVD disc jacket and then select the appropriate function.

SYMPTOM	Check/Remedy
<ul style="list-style-type: none"> • The main unit is not working. (Example: The power goes out or strange noise is heard.) • The Home Cinema System is not working normally. 	<ul style="list-style-type: none"> • Turn off the power and hold the STOP (■) button on the remote control for longer than 5 seconds. STAND BY RED LED blinks on the display and all settings will return to the default values. <p>Using the RESET function will erase all stored settings. Do not use this unless it is necessary.</p>
<p>The password for rating level has been forgotten.</p>	<ul style="list-style-type: none"> • While "NO DISC" message appears on the display of main unit, hold the main unit's STOP (■) button for longer than 5 seconds. "INITIAL" appears on the display and all settings will return to the default values. • Press the POWER button. <p>Using the RESET function will erase all stored settings. Do not use this unless it is necessary.</p>
<p>Can't receive radio broadcast.</p>	<ul style="list-style-type: none"> • Is the antenna connected properly? • If the antenna's input signal is weak, install an external FM antenna in an area with good reception.

Language code list

Enter the appropriate code number for the initial settings “Disc Audio”, “Disc Subtitle” and/or “Disc Menu” (See page 43).

Code	Language	Code	Language	Code	Language	Code	Language
1027	Afar	1181	Frisian	1334	Latvian, Lettish	1506	Slovenian
1028	Abkhazian	1183	Irish	1345	Malagasy	1507	Samoan
1032	Afrikaans	1186	Scots Gaelic	1347	Maori	1508	Shona
1039	Amharic	1194	Galician	1349	Macedonian	1509	Somali
1044	Arabic	1196	Guarani	1350	Malayalam	1511	Albanian
1045	Assamese	1203	Gujarati	1352	Mongolian	1512	Serbian
1051	Aymara	1209	Hausa	1353	Moldavian	1513	Siswati
1052	Azerbaijani	1217	Hindi	1356	Marathi	1514	Sesotho
1053	Bashkir	1226	Croatian	1357	Malay	1515	Sundanese
1057	Byelorussian	1229	Hungarian	1358	Maltese	1516	Swedish
1059	Bulgarian	1233	Armenian	1363	Burmese	1517	Swahili
1060	Bihari	1235	Interlingua	1365	Nauru	1521	Tamil
1069	Bislama	1239	Interlingue	1369	Nepali	1525	Tegulu
1066	Bengali; Bangla	1245	Inupiak	1376	Dutch	1527	Tajik
1067	Tibetan	1248	Indonesian	1379	Norwegian	1528	Thai
1070	Breton	1253	Icelandic	1393	Occitan	1529	Tigrinya
1079	Catalan	1254	Italian	1403	(Afan) Oromo	1531	Turkmen
1093	Corsican	1257	Hebrew	1408	Oriya	1532	Tagalog
1097	Czech	1261	Japanese	1417	Punjabi	1534	Setswana
1103	Welsh	1269	Yiddish	1428	Polish	1535	Tonga
1105	Danish	1283	Javanese	1435	Pashto, Pushto	1538	Turkish
1109	German	1287	Georgian	1436	Portuguese	1539	Tsonga
1130	Bhutani	1297	Kazakh	1463	Quechua	1540	Tatar
1142	Greek	1298	Greenlandic	1481	Rhaeto-Romance	1543	Twi
1144	English	1299	Cambodian	1482	Kirundi	1557	Ukrainian
1145	Esperanto	1300	Canada	1483	Romanian	1564	Urdu
1149	Spanish	1301	Korean	1489	Russian	1572	Uzbek
1150	Estonian	1305	Kashmiri	1491	Kinyarwanda	1581	Vietnamese
1151	Basque	1307	Kurdish	1495	Sanskrit	1587	Volapuk
1157	Persian	1311	Kirghiz	1498	Sindhi	1613	Wolof
1165	Finnish	1313	Latin	1501	Sangro	1632	Xhosa
1166	Fiji	1326	Lingala	1502	Serbo-Croatian	1665	Yoruba
1171	Faeroese	1327	Laothian	1503	Singhalese	1684	Chinese
1174	French	1332	Lithuanian	1505	Slovak	1697	Zulu

Appendix

CAUTIONS ON HANDLING AND STORING DISCS

Small scratches on the disc may reduce sound and picture quality or cause skipping.

Be especially careful not to scratch discs when handling them.

 
 
 
Handling discs

Do not touch the playback side of the disc.

Hold the disc by the edges so that fingerprints will not get on the surface.

Do not stick paper or tape on the disc.

Disc Storage

Do not keep in direct sunlight	Keep in a cool ventilated area	Keep in a clean Protection jacket. Store vertically.
		



- Do not allow the discs to become contaminated with dirt.
- Do not load cracked or scratched discs.

Handling and Storing Discs

If you get fingerprints or dirt on the disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.

- When cleaning, wipe gently from the inside to the outside of the disc.



- Condensation may form if warm air comes into contact with cold parts inside the player. When condensation forms inside the player, the player may not operate correctly. If this occurs, remove the disc and let the player stand for 1 or 2 hours with the power on.

Appendix

SPECIFICATIONS

General	Power Consumption	95 W	
	Weight	4.2 Kg	
	Dimensions	449.6 (W) x 251.5 (H) x 99.1 (D) mm	
	Operating Temperature Range	+5°C~+35°C	
	Operating Humidity Range	10 % to 75 %	
Disc	DVD (Digital Versatile Disc)	Reading Speed : 3.49 ~ 4.06 m/sec. Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.	
	CD : 12 cm (COMPACT DISC)	Reading Speed : 4.8 ~ 5.6 m/sec. Maximum Play Time : 74 min.	
	CD : 8cm (COMPACT DISC)	Reading Speed : 4.8 ~ 5.6 m/sec. Maximum Play Time : 20 min.	
Video Output	Composite Video	1.0 Vp-p (75 Ω load)	
	Component Video	Y : 1.0 Vp-p (75 Ω load)	
		Pr : 0.70 Vp-p (75 Ω load)	
		Pb : 0.70 Vp-p (75 Ω load)	
	HDMI	Impedance: 85~115 Ω	
Amplifier	Front speaker output	133W x 2(3Ω)	
	Subwoofer speaker output	135W(3Ω)	
	Frequency range	20Hz~20KHz	
	S/N Ratio	70dB	
	Channel separation	60dB	
	Input sensitivity	(AUX)400mV	
Speaker	Speaker system	2.1ch speaker system	
		Front	Subwoofer
	Impedance	3 Ω	3 Ω
	Frequency range	140 Hz~20 KHz	40Hz~160Hz
	Output sound pressure level	88dB	90dB
	Rated input	133W	135W
	Maximum input	266W	270W
	Dimensions (W x H x D)	Front : 185x605x185 mm Subwoofer : 256x256x298 mm	
	Weights	Front :1.6 Kg Subwoofer : 4.2 Kg	

*: Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Region	Country	Customer Care Center ☎	Web Site
North America	CANADA	1-800-SAMSUNG(726-7864)	www.samsung.com/ca
	MEXICO	01-800-SAMSUNG(726-7864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG(726-7864)	www.samsung.com/us
Latin America	ARGENTINE	0800-333-3733	www.samsung.com/ar
	BRAZIL	0800-124-421, 4004-0000	www.samsung.com/br
	CHILE	800-SAMSUNG(726-7864)	www.samsung.com/cl
	NICARAGUA	00-1800-5077267	www.samsung.com/latin
	HONDURAS	800-7919267	www.samsung.com/latin
	COSTA RICA	0-800-507-7267	www.samsung.com/latin
	ECUADOR	1-800-10-7267	www.samsung.com/latin
	EL SALVADOR	800-6225	www.samsung.com/latin
	GUATEMALA	1-800-299-0013	www.samsung.com/latin
	JAMAICA	1-800-234-7267	www.samsung.com/latin
	PANAMA	800-7267	www.samsung.com/latin
	PUERTO RICO	1-800-682-3180	www.samsung.com/latin
	REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
	TRINIDAD & TOBAGO	1-800-SAMSUNG(726-7864)	www.samsung.com/latin
	VENEZUELA	0-800-100-5303	www.samsung.com/latin
	COLOMBIA	01-8000112112	www.samsung.com.co
Europe	BELGIUM	02 201 2418	www.samsung.com/be (Dutch) www.samsung.com/be_fr (French)
	CZECH REPUBLIC	800-SAMSUNG(800-726786)	www.samsung.com/cz
	DENMARK	8-SAMSUNG(7267864)	www.samsung.com/dk
	FINLAND	30-6227 515	www.samsung.com/fi
	FRANCE	01 4863 0000	www.samsung.com/fr
	GERMANY	01805 - SAMSUNG(726-7864 € 0,14/Min)	www.samsung.de
	HUNGARY	06-80-SAMSUNG(726-7864)	www.samsung.com/hu
	ITALIA	800-SAMSUNG(726-7864)	www.samsung.com/it
	LUXEMBURG	02 261 03 710	www.samsung.com/lu
	NETHERLANDS	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)	www.samsung.com/nl
	NORWAY	3-SAMSUNG(7267864)	www.samsung.com/no
	POLAND	0 801 1SAMSUNG(172678), 022-607-93-33	www.samsung.com/pl
	PORTUGAL	80820-SAMSUNG(726-7864)	www.samsung.com/pt
	SLOVAKIA	0800-SAMSUNG(726-7864)	www.samsung.com/sk
	SPAIN	902-1-SAMSUNG (902 172 678)	www.samsung.com/es
	SWEDEN	075-SAMSUNG(726 78 64)	www.samsung.com/se
	U.K	0845 SAMSUNG (7267864)	www.samsung.com/uk
	EIRE	0818 717 100	www.samsung.com/ie
	AUSTRIA	0810-SAMSUNG(7267864, € 0.07/min)	www.samsung.com/at
	SWITZERLAND	0848-SAMSUNG(7267864, CHF 0.08/min)	www.samsung.com/ch
CIS	RUSSIA	8-800-555-55-55	www.samsung.ru
	KAZAKHSTAN	8-10-800-500-55-500	www.samsung.com/kz_ru
	UZBEKISTAN	8-10-800-500-55-500	www.samsung.com/kz_ru
	KYRGYZSTAN	00-800-500-55-500	
	TADJIKISTAN	8-10-800-500-55-500	
	UKRAINE	8-800-502-0000	www.samsung.ua
	LITHUANIA	8-800-77777	www.samsung.com/lt
	LATVIA	8000-7267	www.samsung.com/lv
	ESTONIA	800-7267	www.samsung.com/ee
Asia Pacific	AUSTRALIA	1300 362 603	www.samsung.com/au
	NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
	CHINA	800-810-5858, 400-810-5858, 010-6475 1880	www.samsung.com/cn
	HONG KONG	3698-4698	www.samsung.com/hk
	INDIA	3030 8282, 1800 110011, 1-800-3000-8282	www.samsung.com/in
	INDONESIA	0800-112-8888	www.samsung.com/id
	JAPAN	0120-327-527	www.samsung.com/jp
	MALAYSIA	1800-88-9999	www.samsung.com/my
	PHILIPPINES	1-800-10-SAMSUNG(726-7864) 1-800-3-SAMSUNG(726-7864), 02-5805777	www.samsung.com/ph
	SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
	THAILAND	1800-29-3232, 02-689-3232	www.samsung.com/th
	TAIWAN	0800-329-999	www.samsung.com/tw
	VIETNAM	1 800 588 889	www.samsung.com/vn
Middle East & Africa	TURKEY	444 77 11	www.samsung.com/tr
	SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com/za
	U.A.E	800-SAMSUNG (726-7864), 8000-4726	www.samsung.com/ae



Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

